

EVOTECH®
P E R F O R M A N C E


www.evotech-performance.com


Honda CB750 Hornet
Tail Tidy Instructions






- Ⓐ 1 x Retro Light
- Ⓑ 1 x Loom Connector No.7
- Ⓒ 1 x M5 x 10 Black Button Head
- Ⓓ 2 x M4 Flange Nuts
- Ⓔ 2 x M4 x 10 Black Button Head
- Ⓕ 2 x No.2 P-clip
- Ⓖ 2 x M6 x 35 Black Button Head
- Ⓗ 2 x Spacer
- Ⓘ 4 x M6 x 16 Black Button Head
- Ⓙ 4 x M6 Flange Nut


EVOTECH[®]
P E R F O R M A N C E

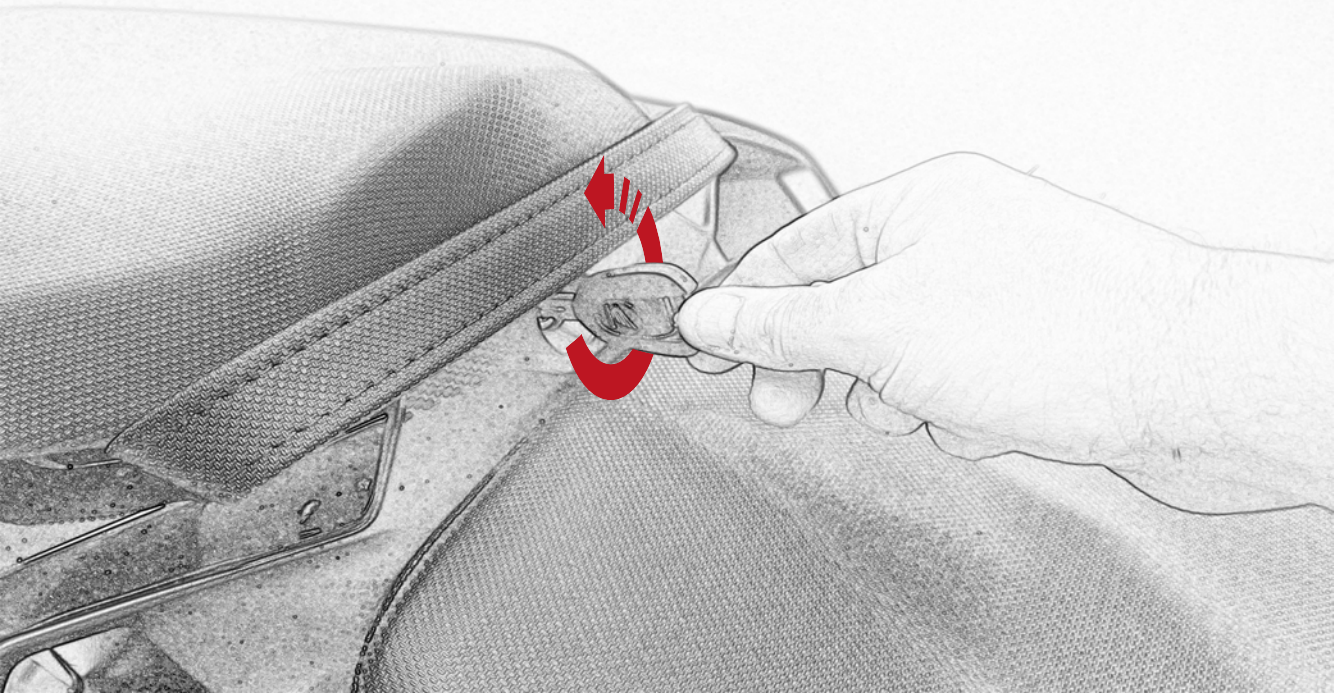


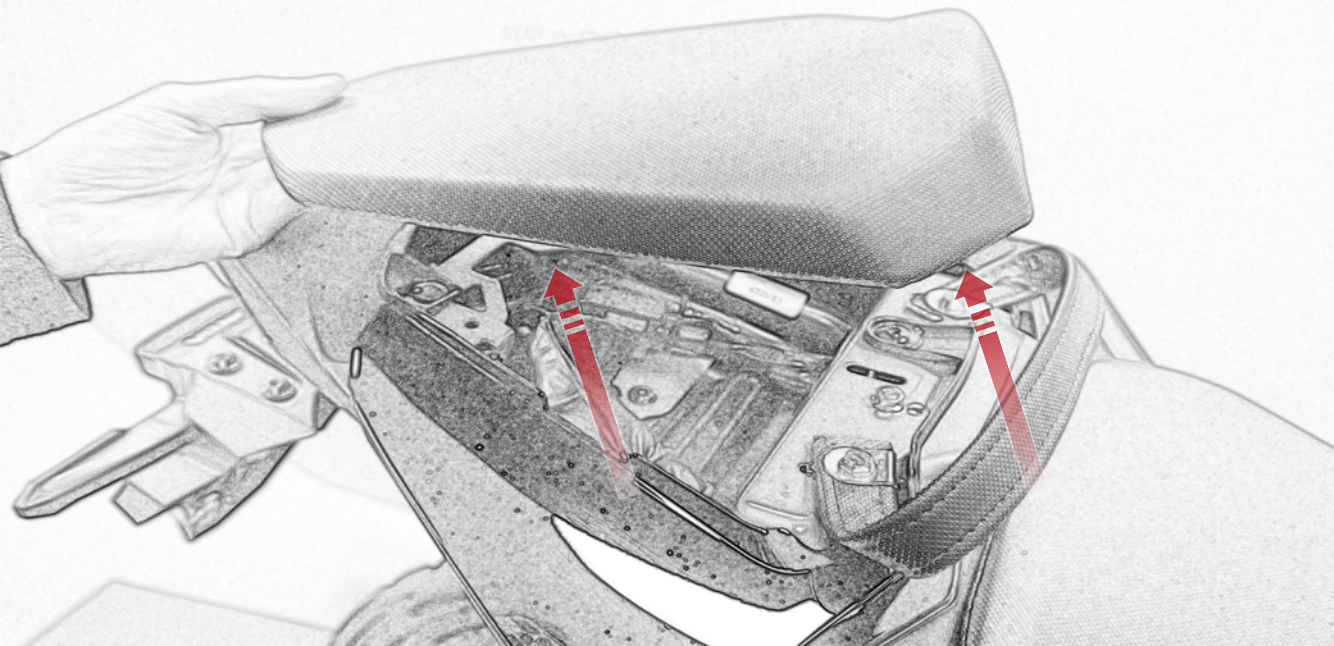


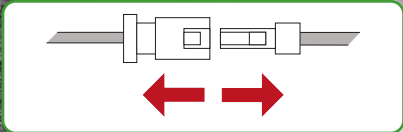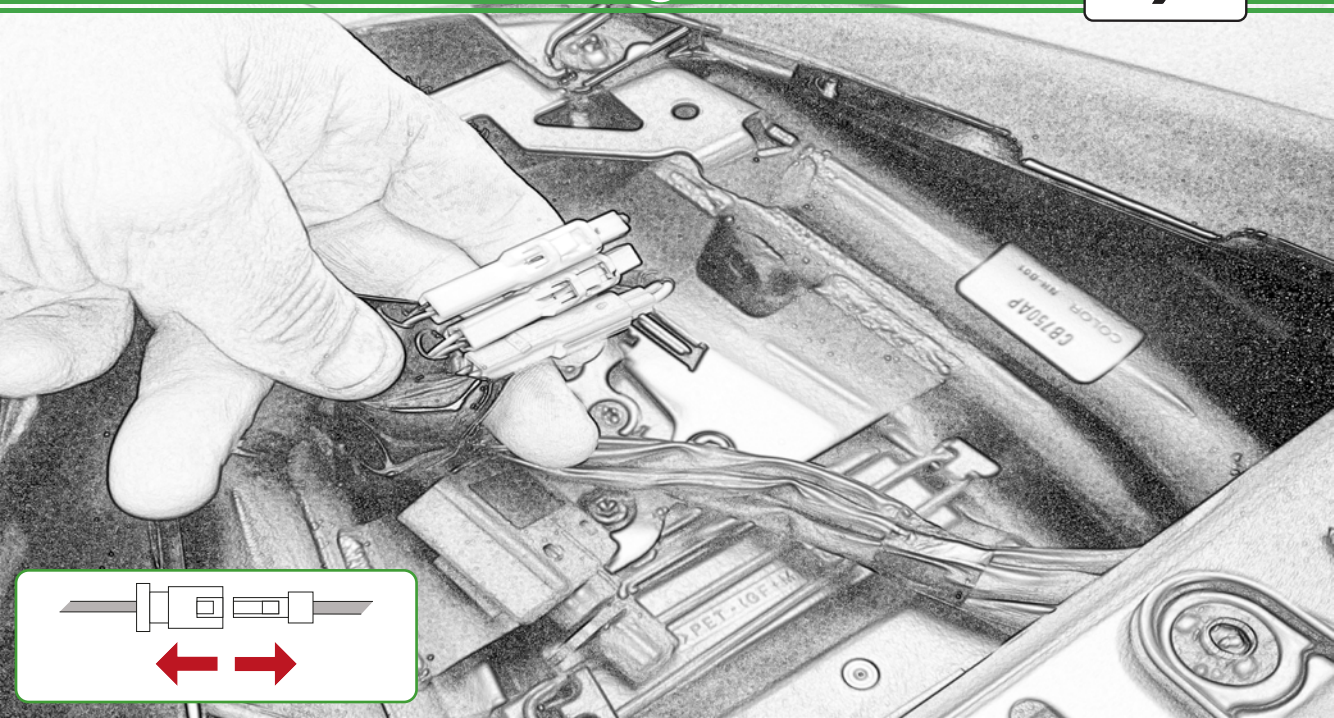


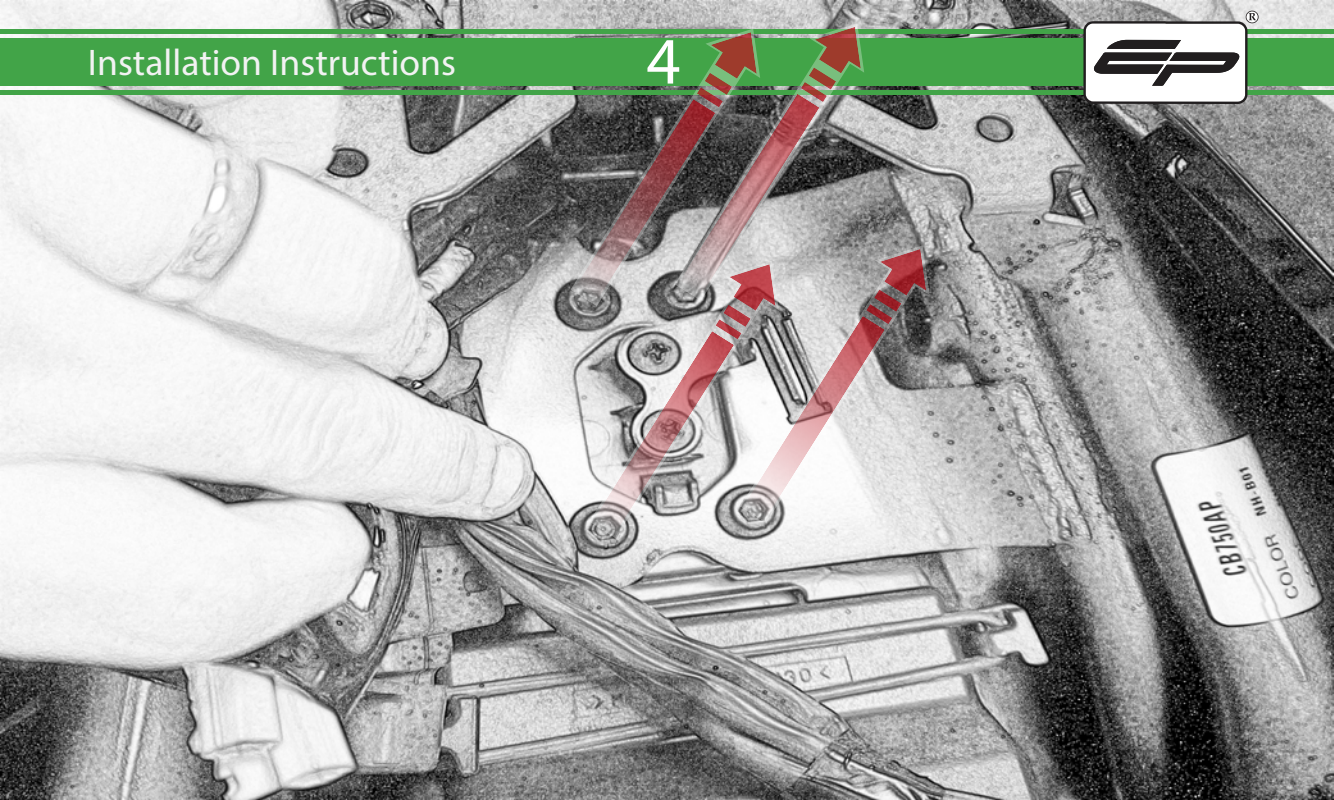


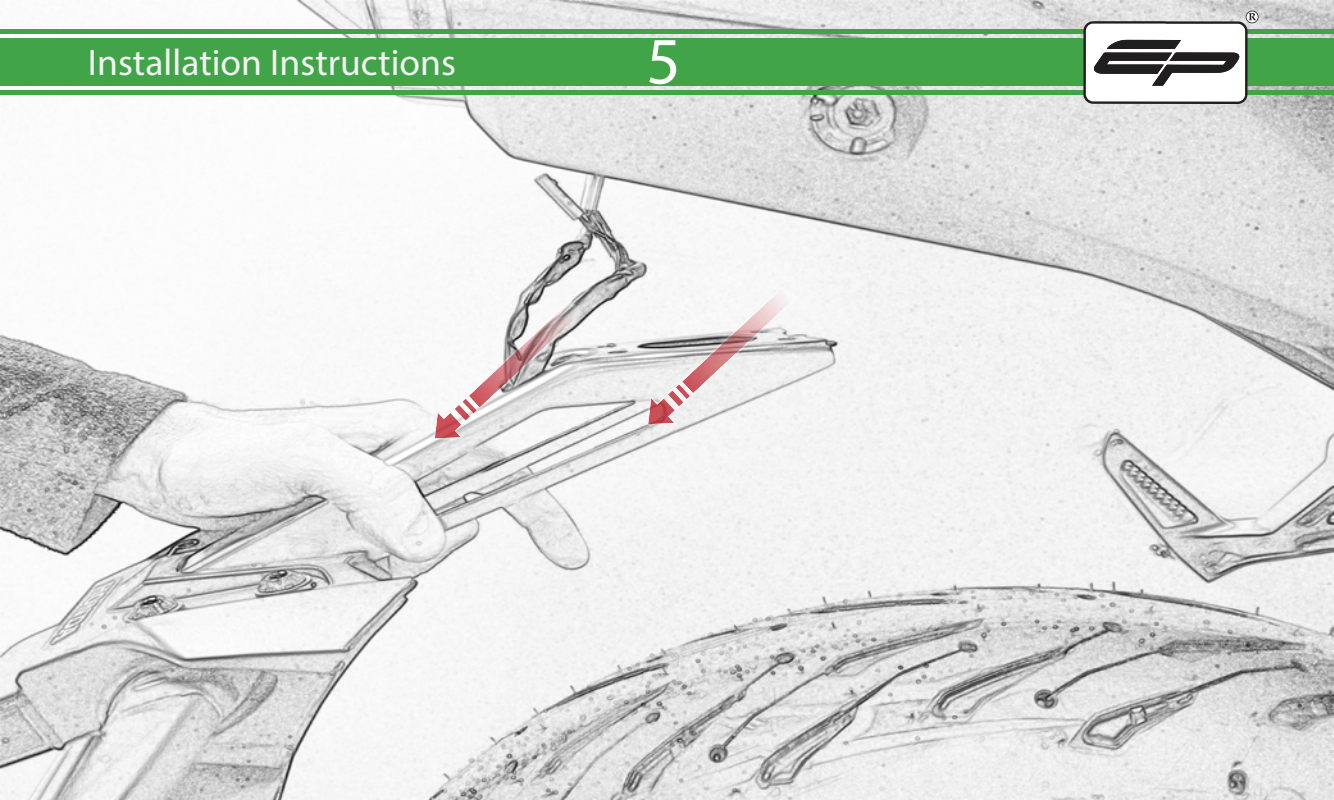


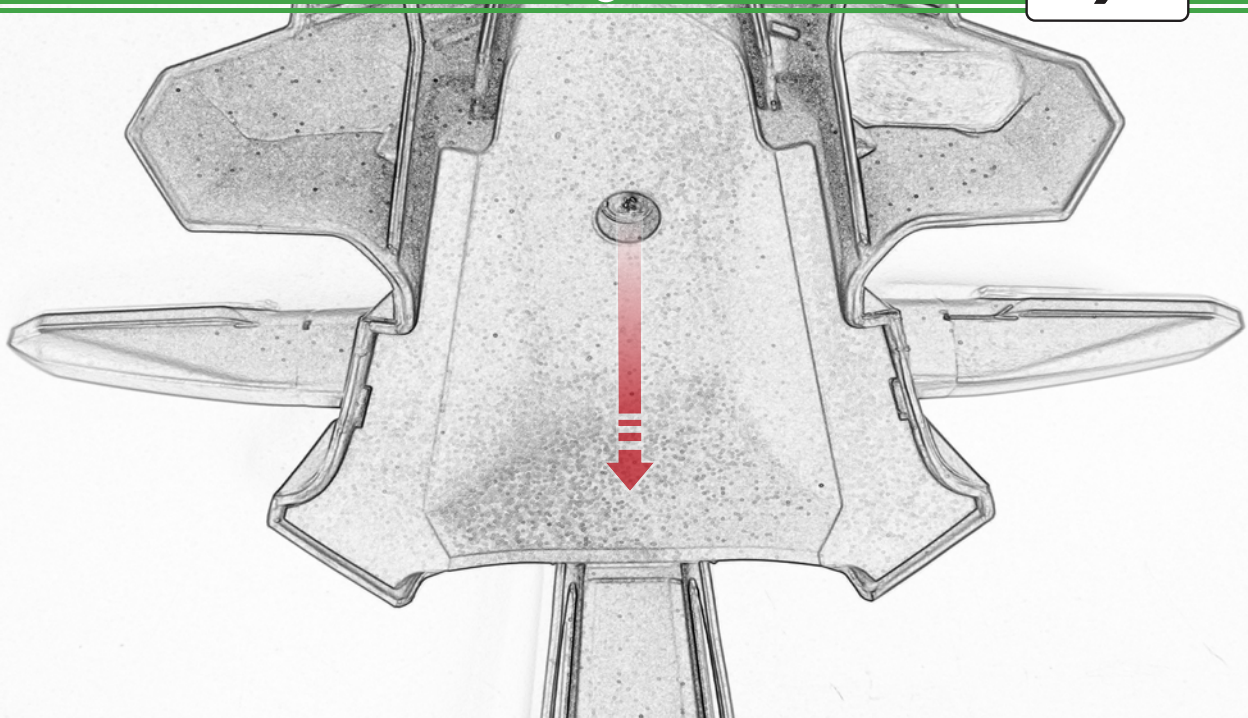


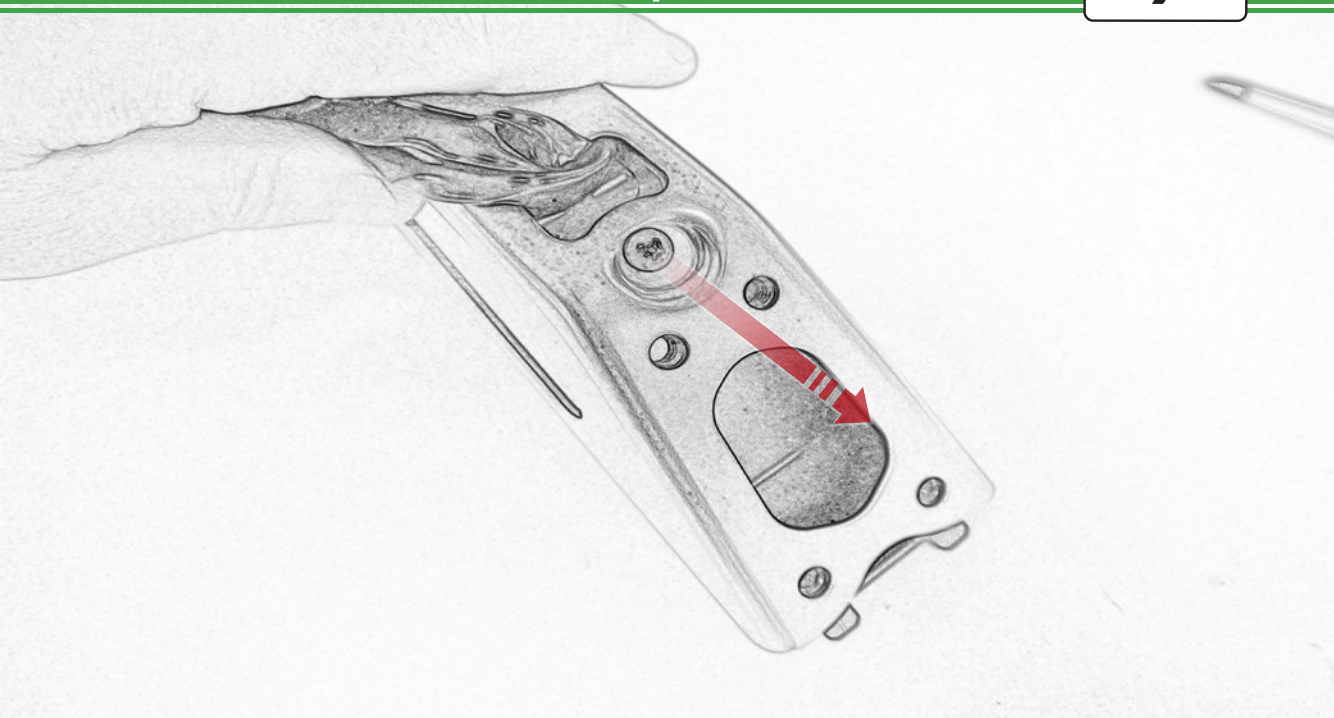


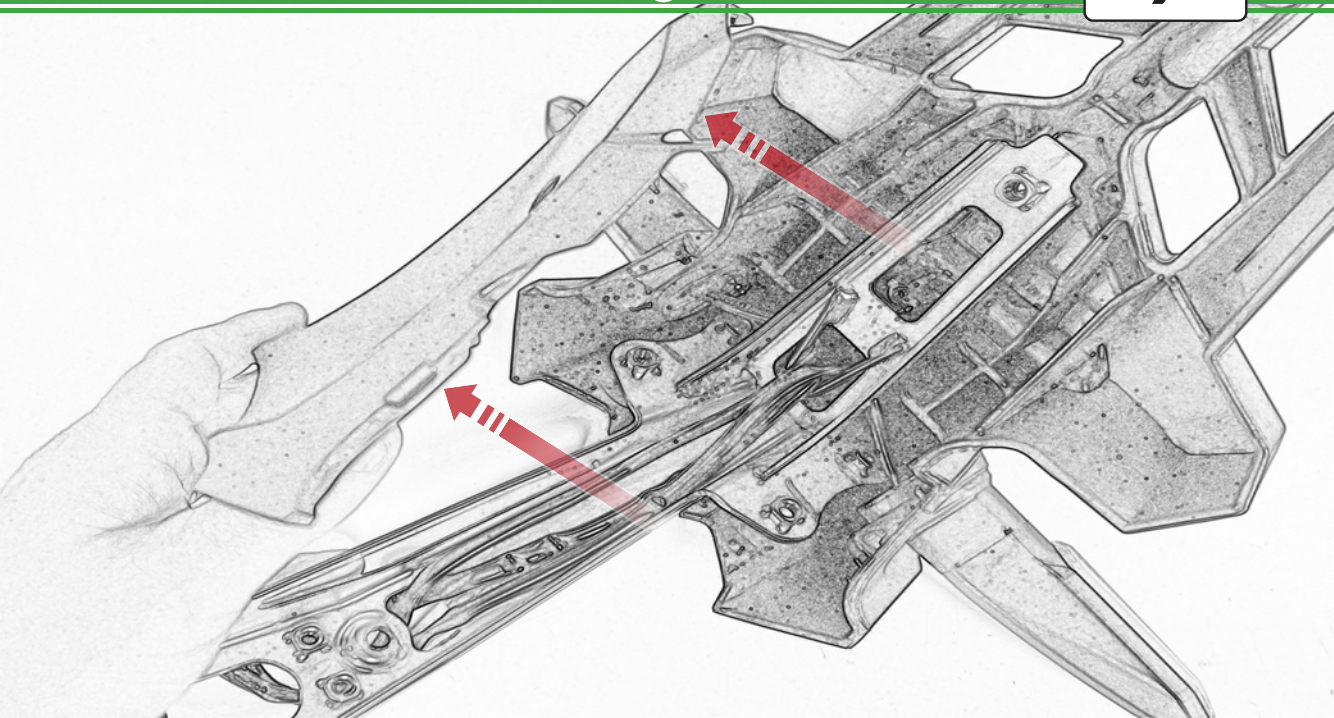

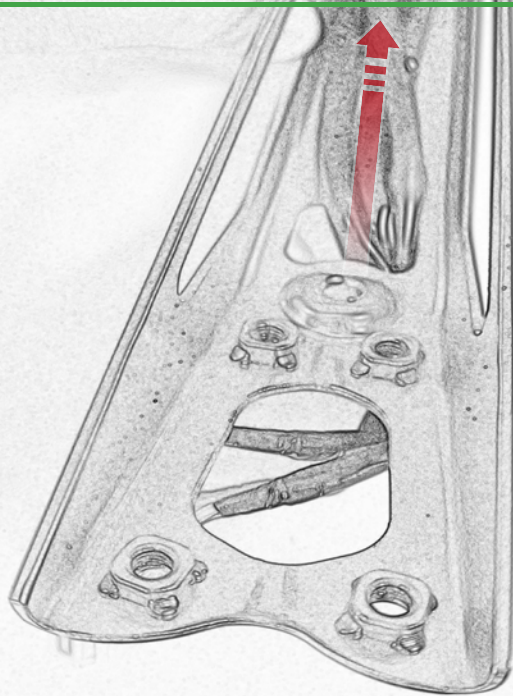


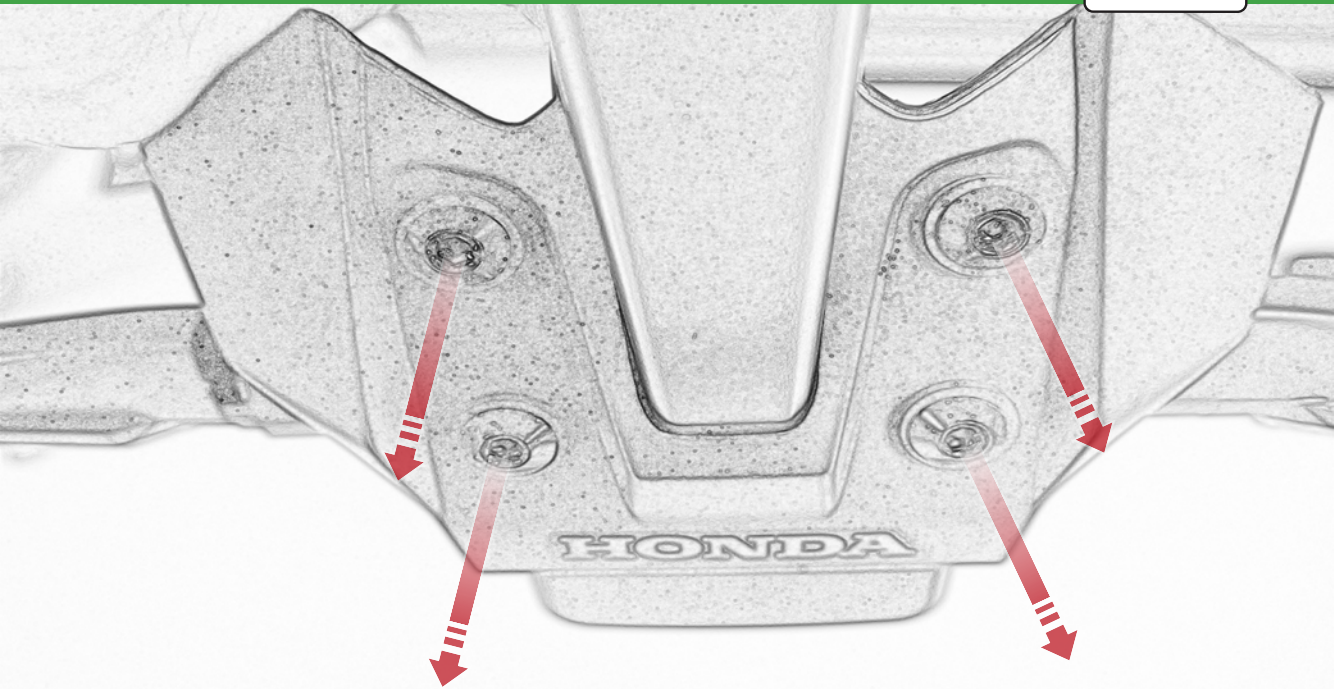

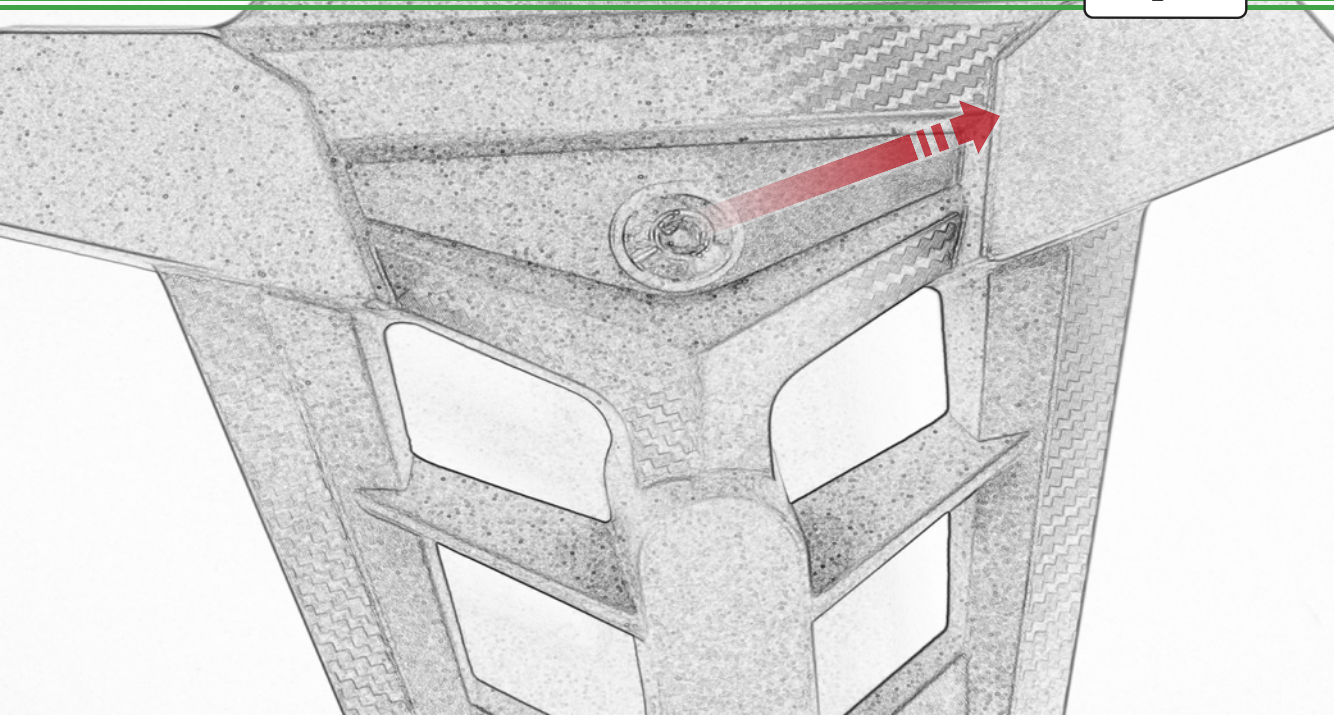


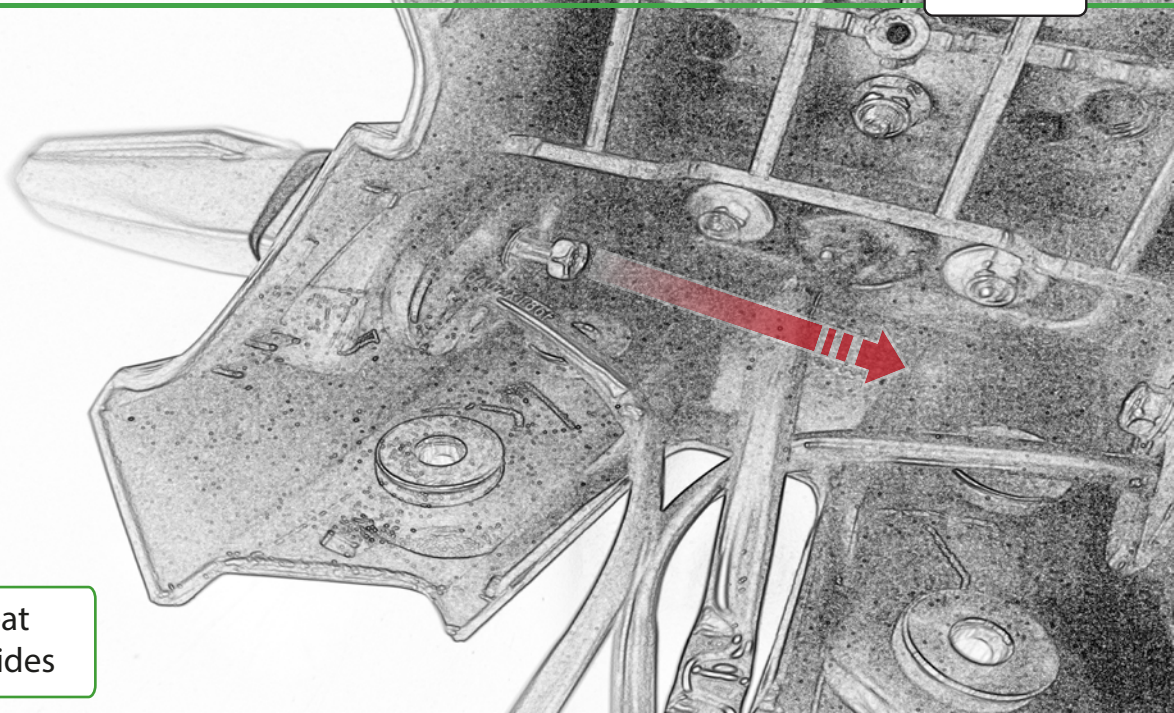


Repeat
Both Sides

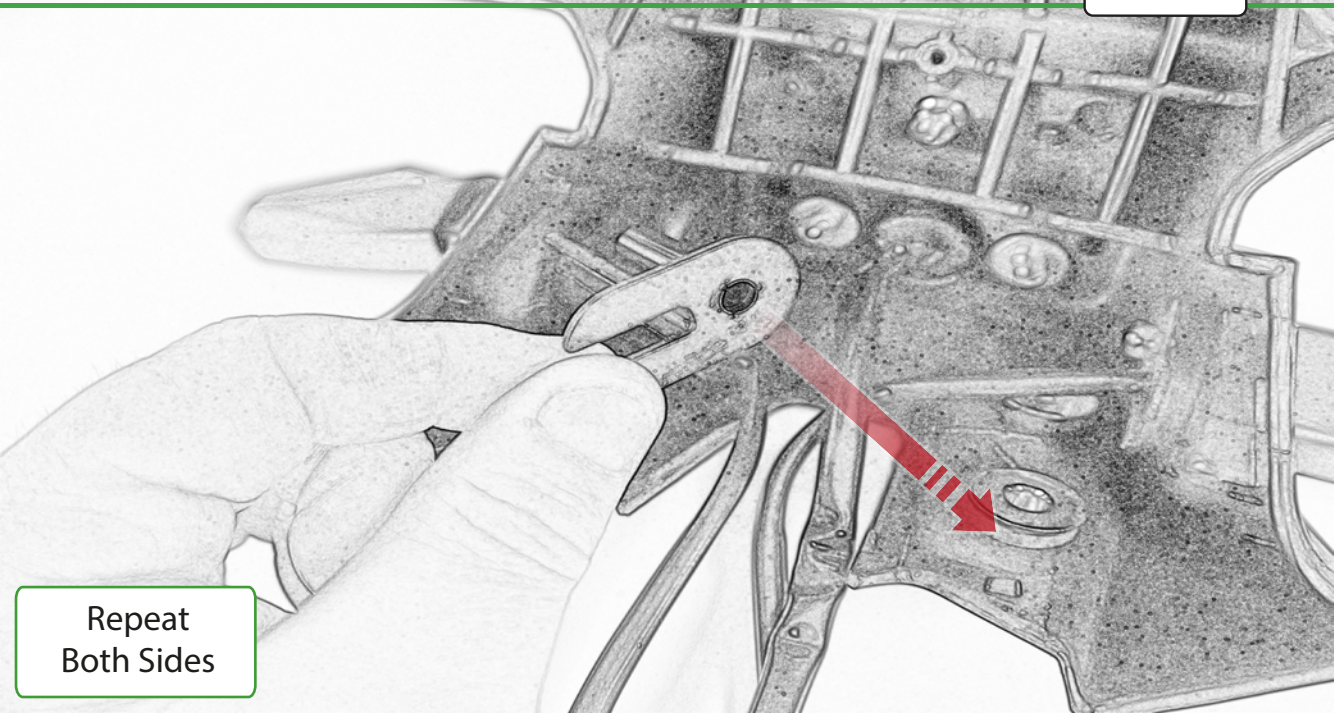


Repeat
Both Sides

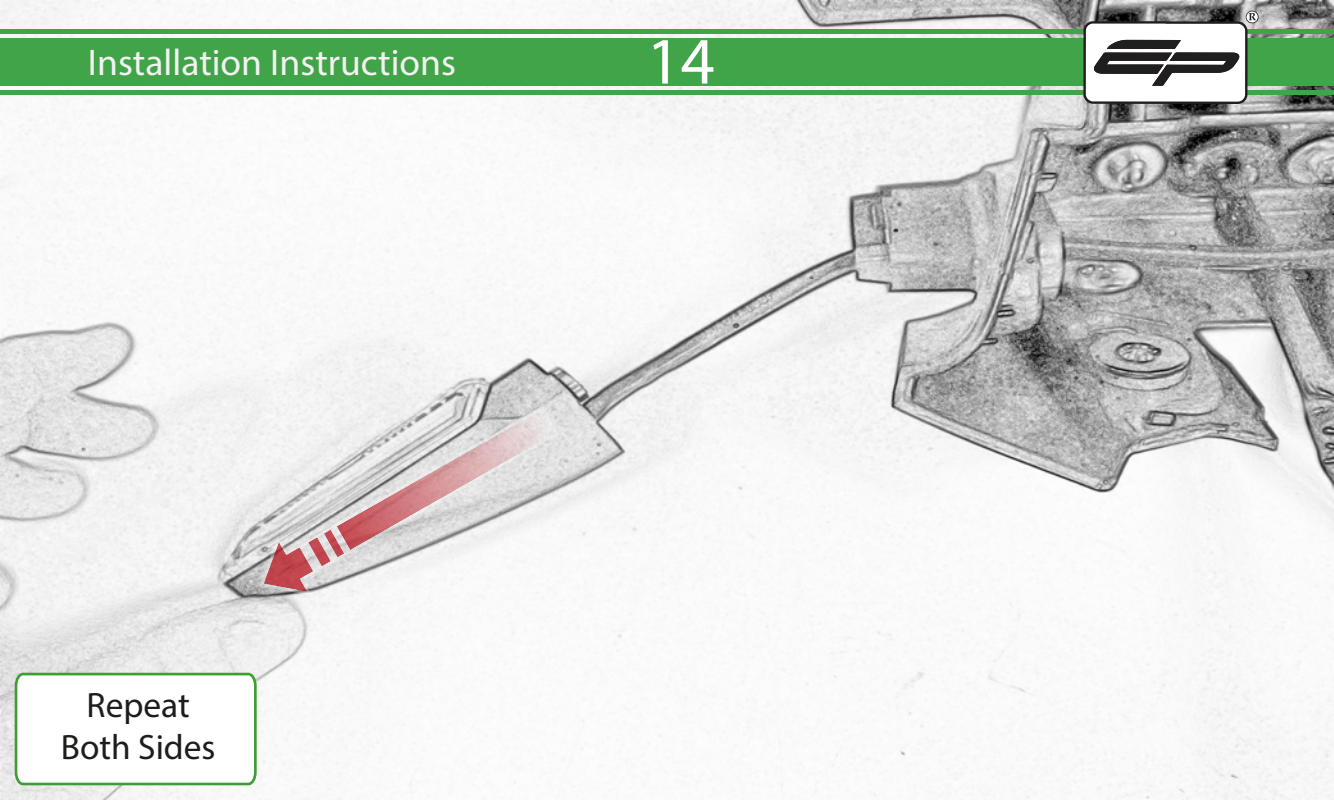


Repeat
Both Sides

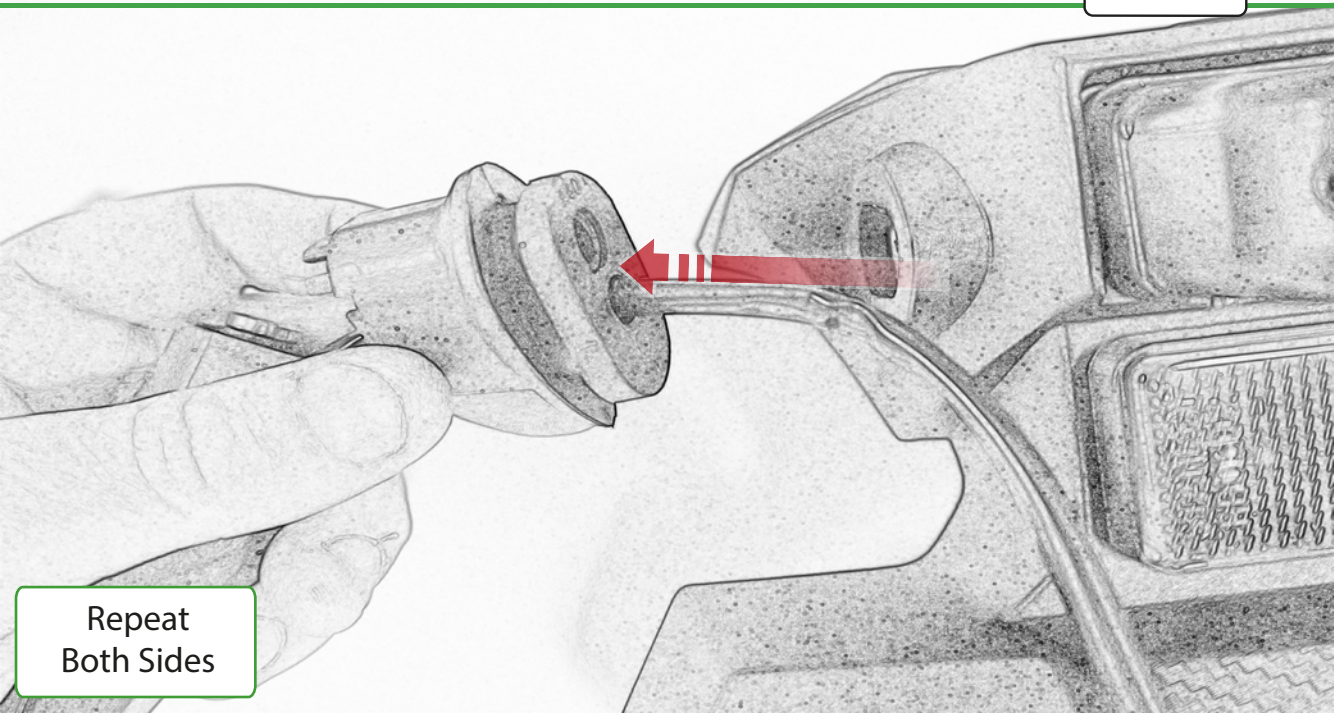



Repeat
Both Sides

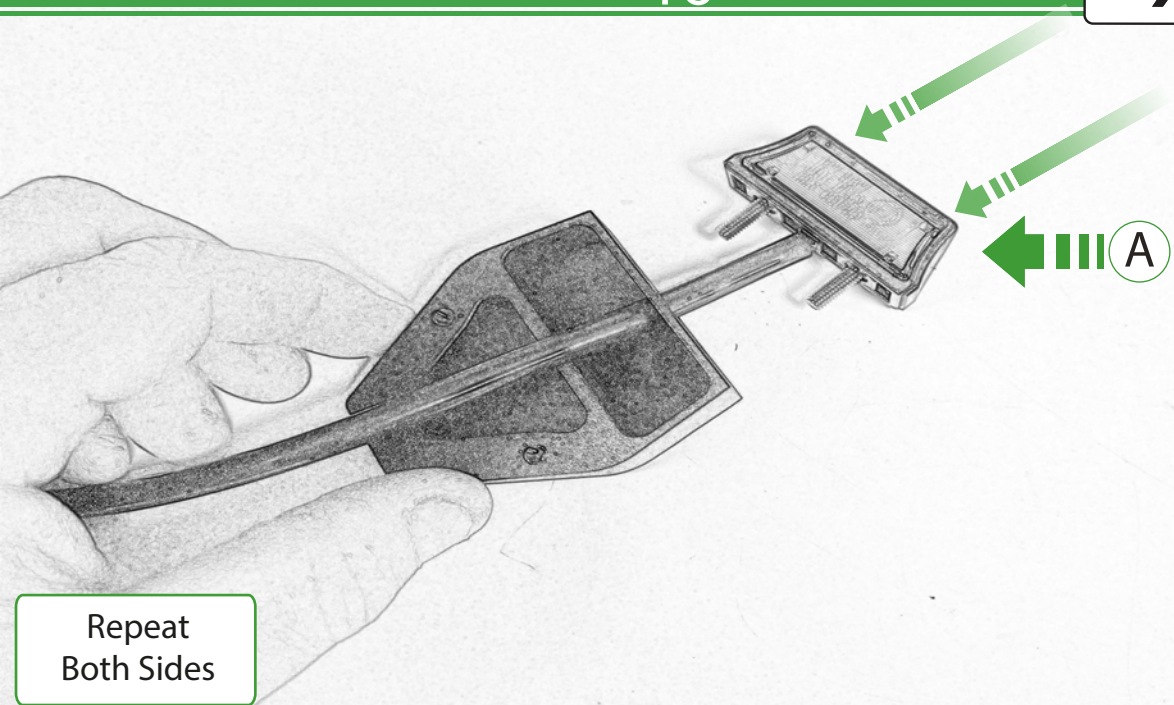


Repeat
Both Sides

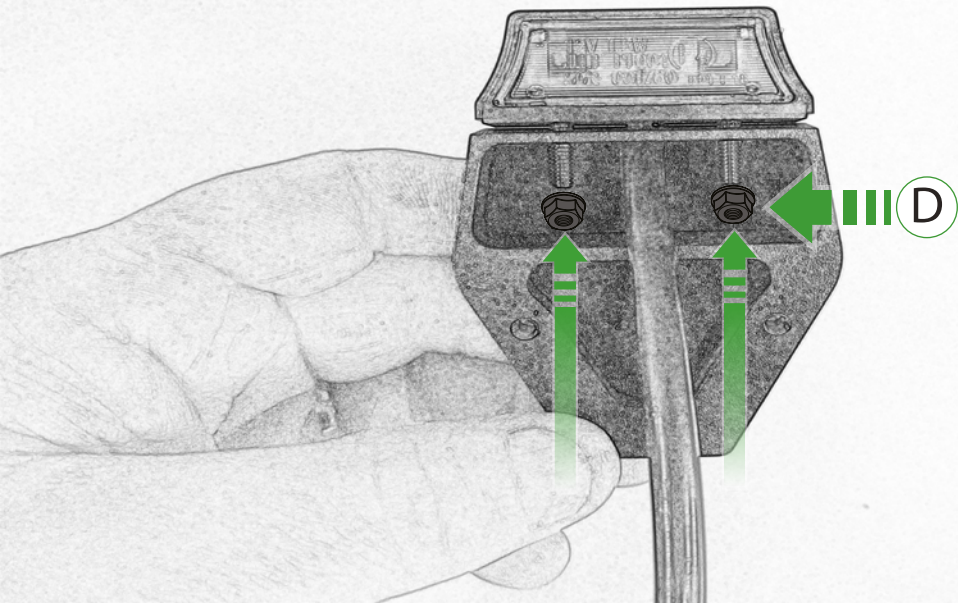


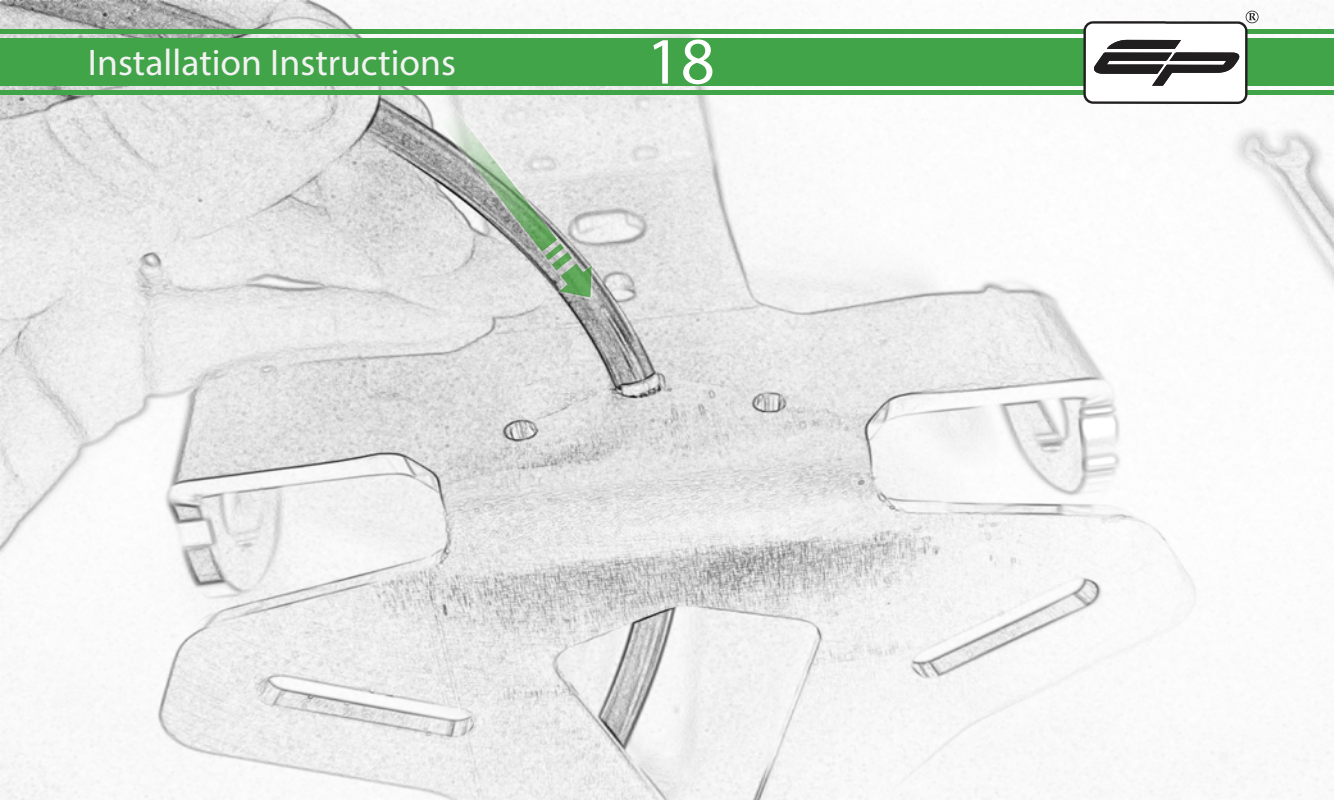

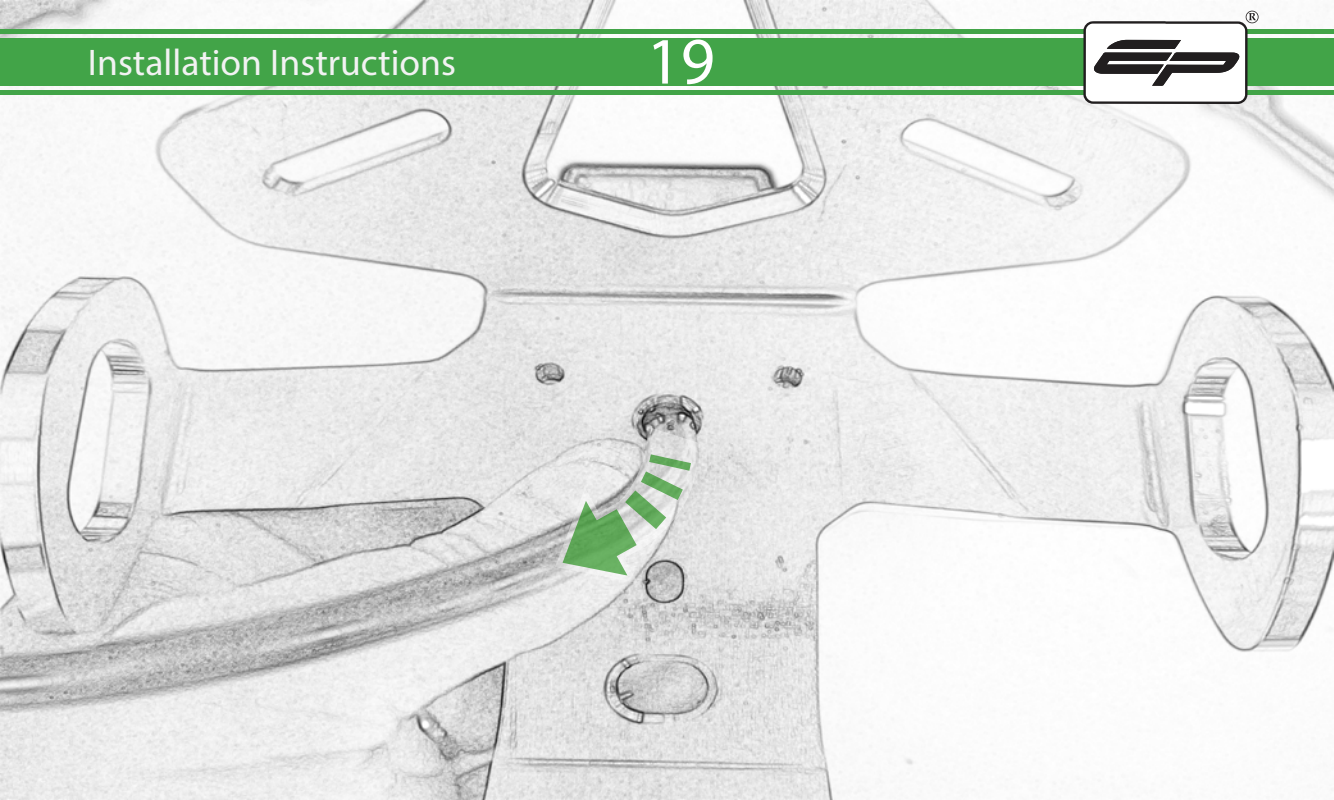


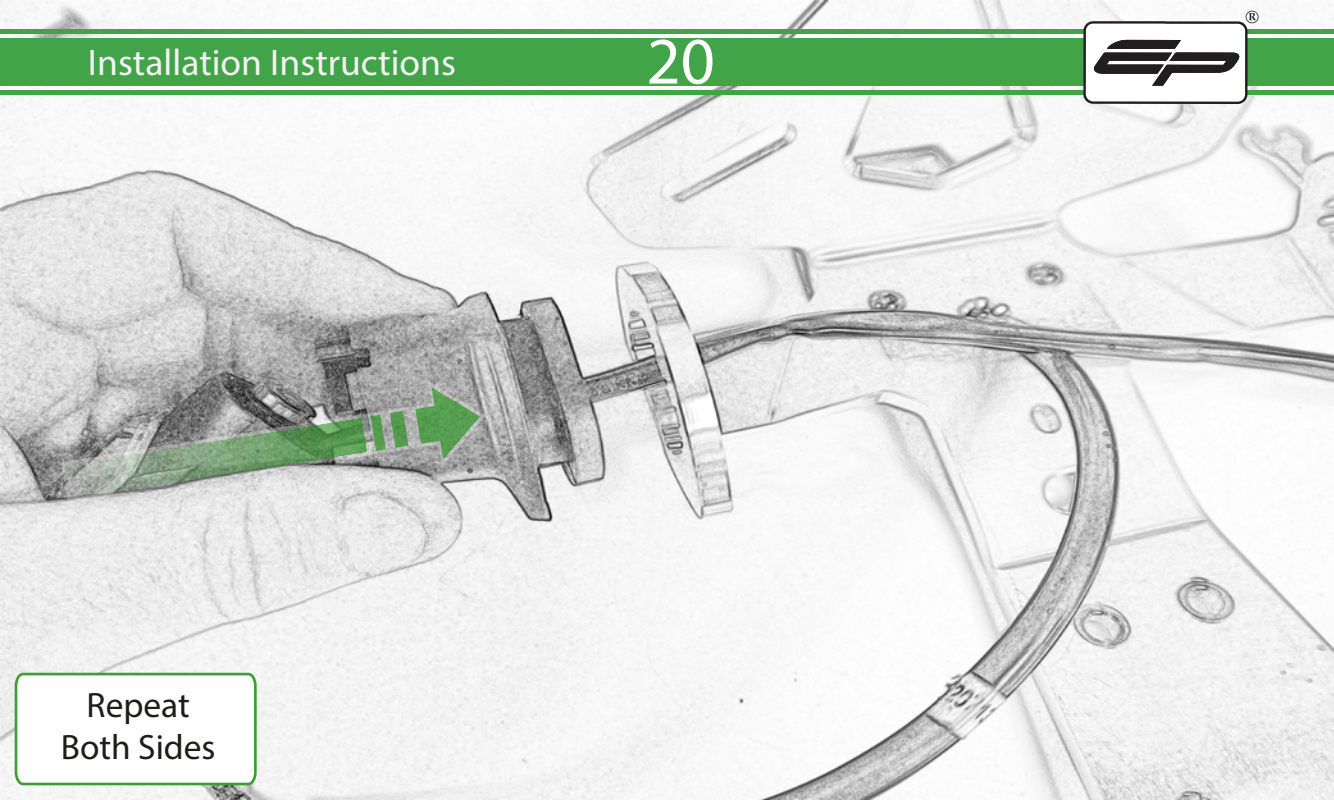


Repeat
Both Sides

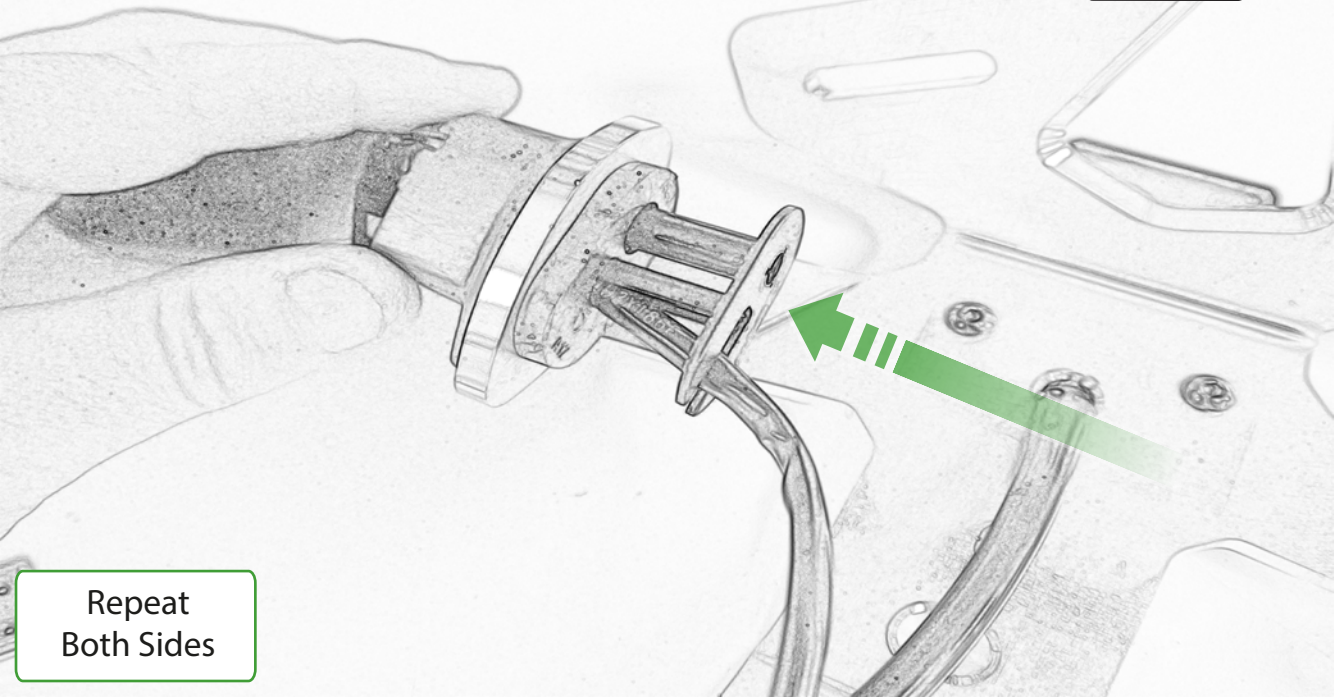



Repeat
Both Sides

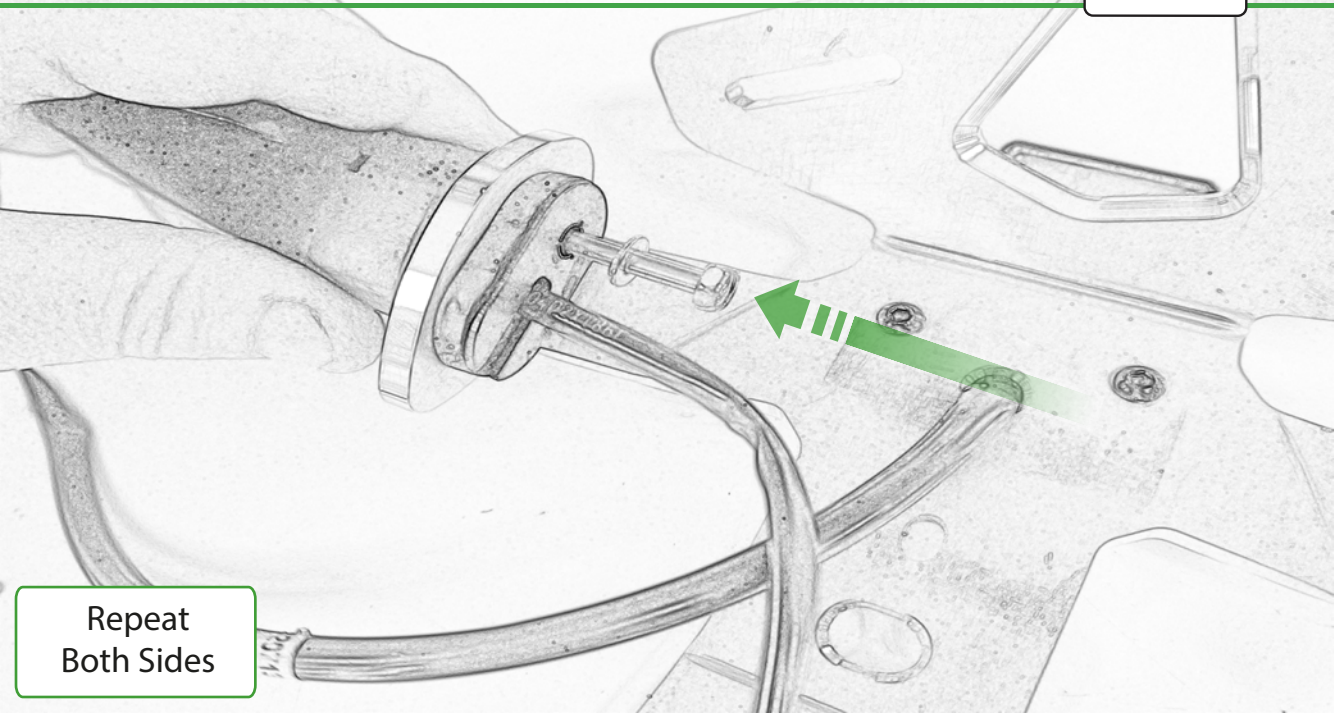



Repeat
Both Sides

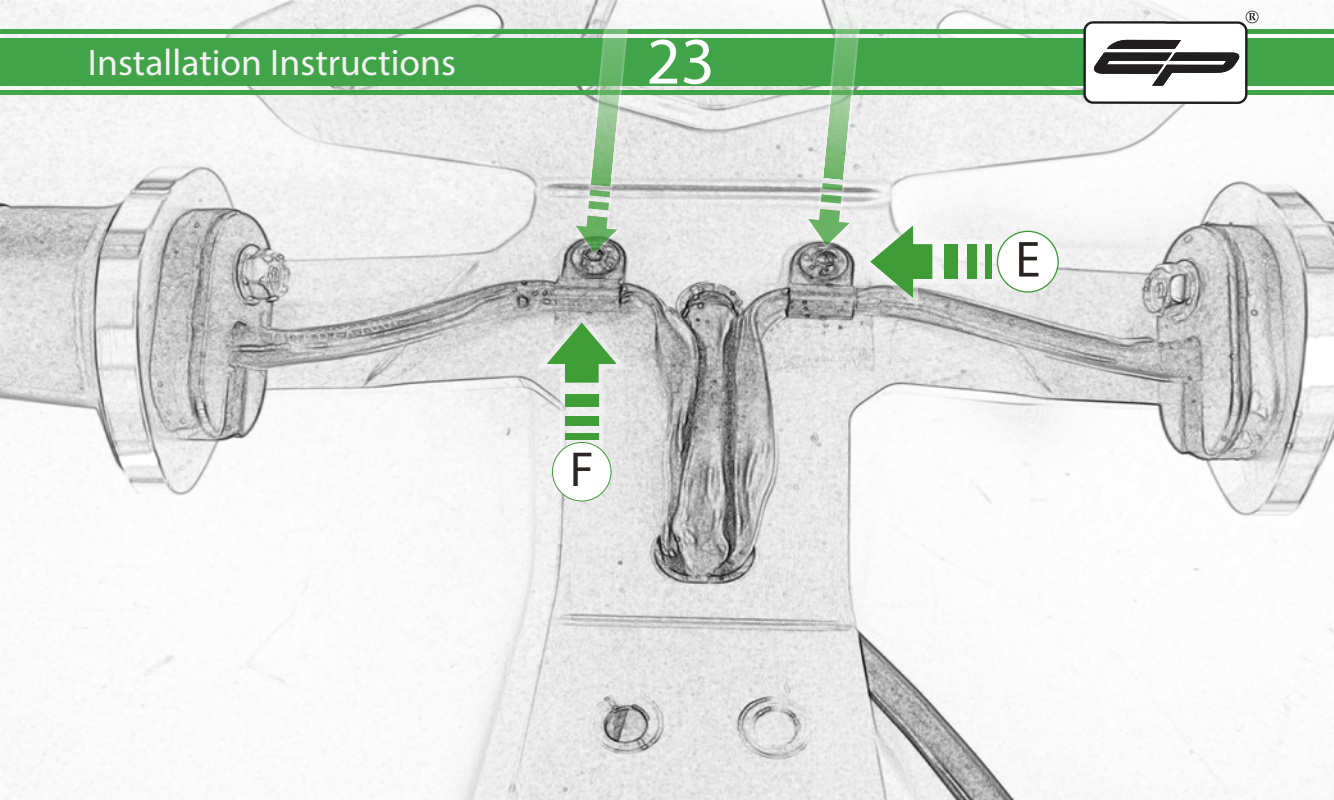


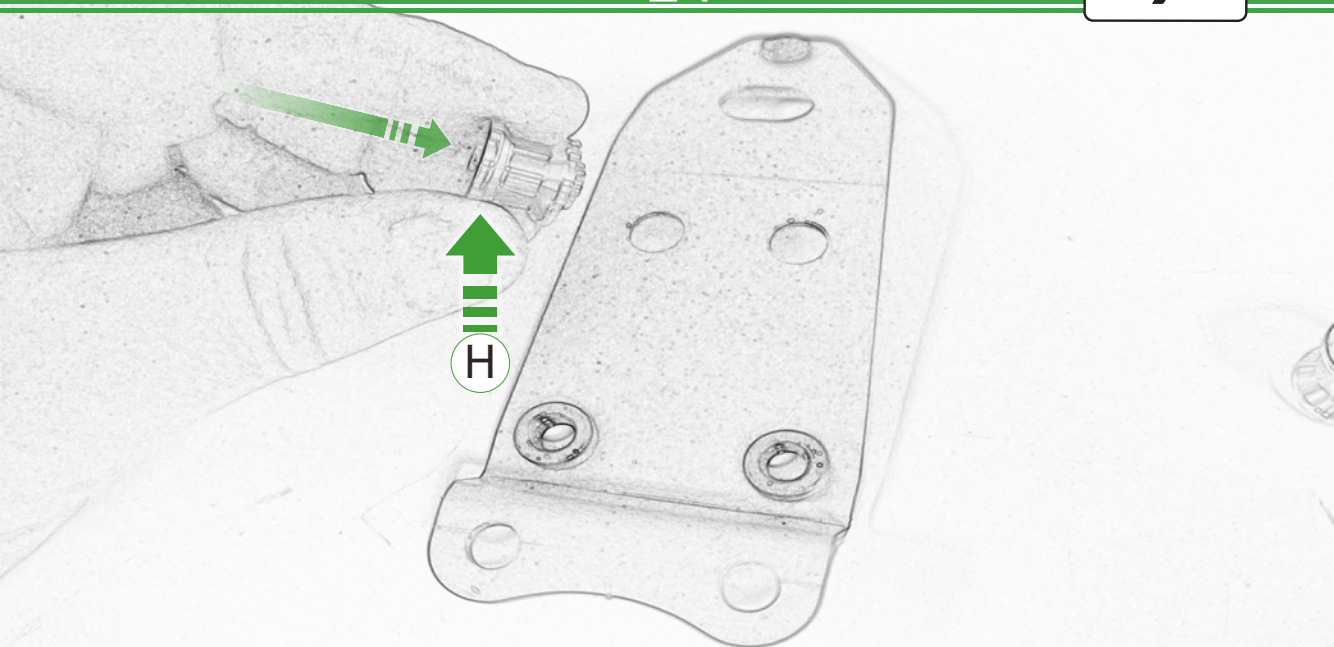


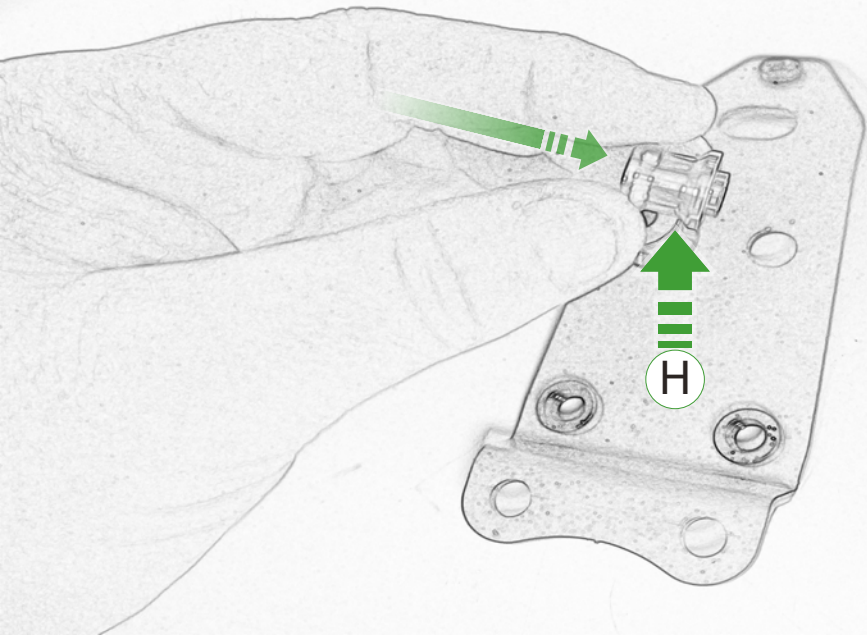


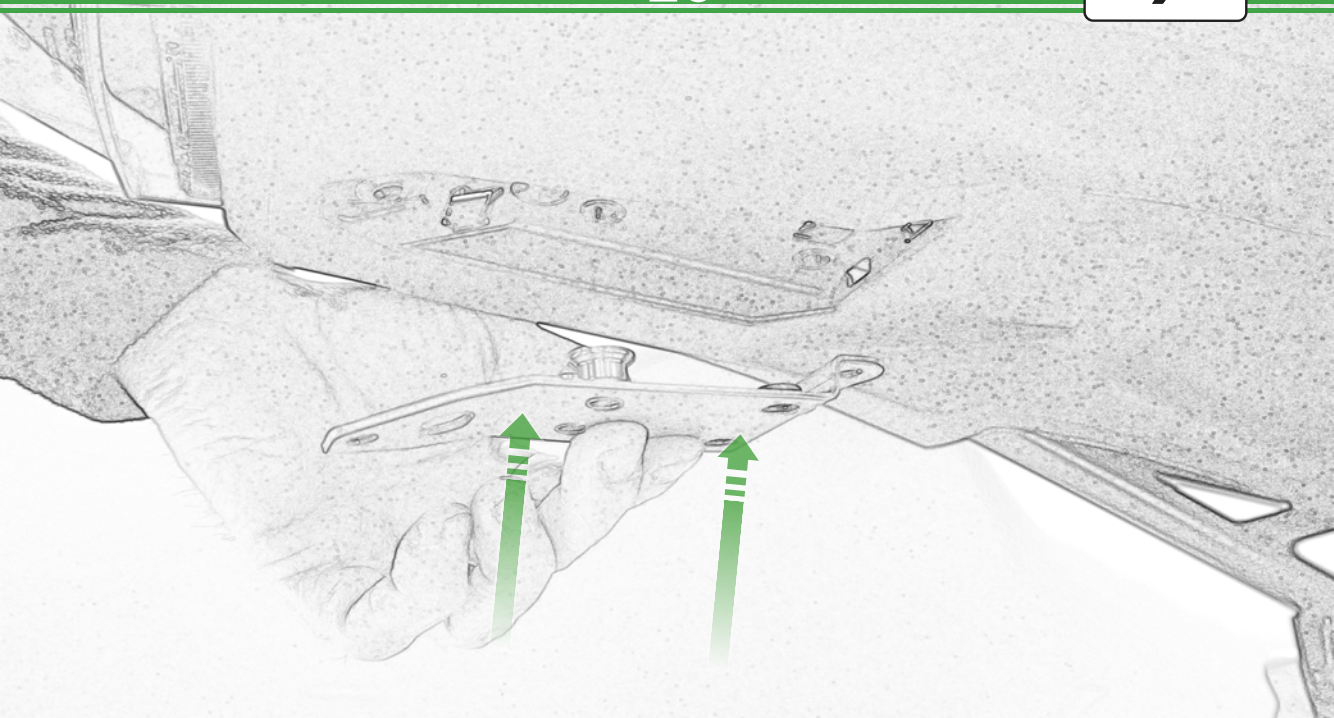

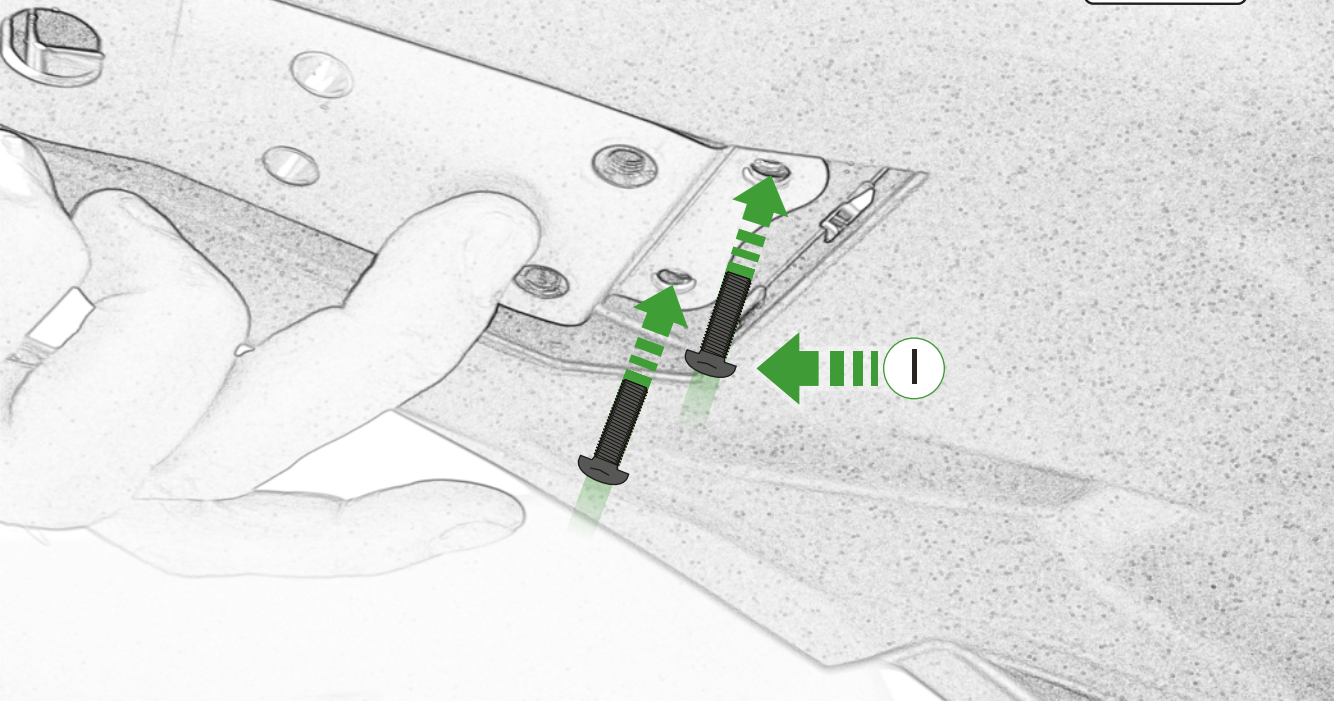


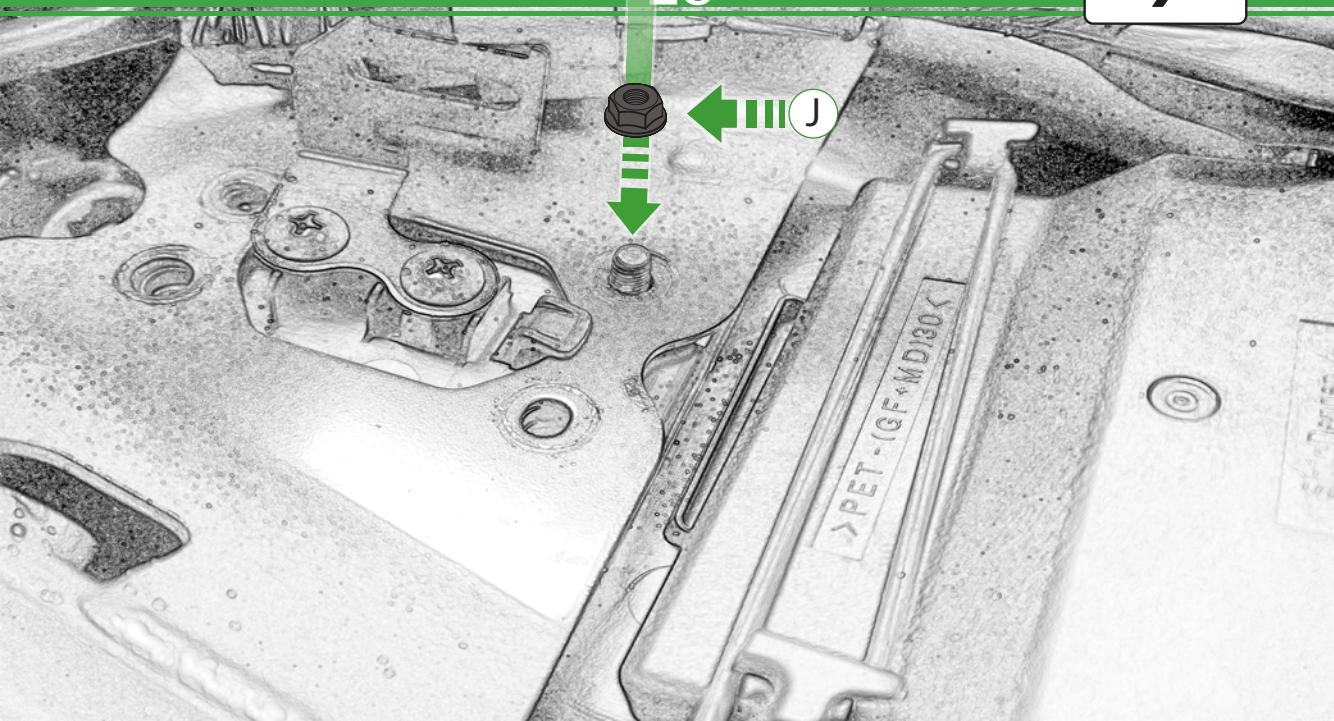


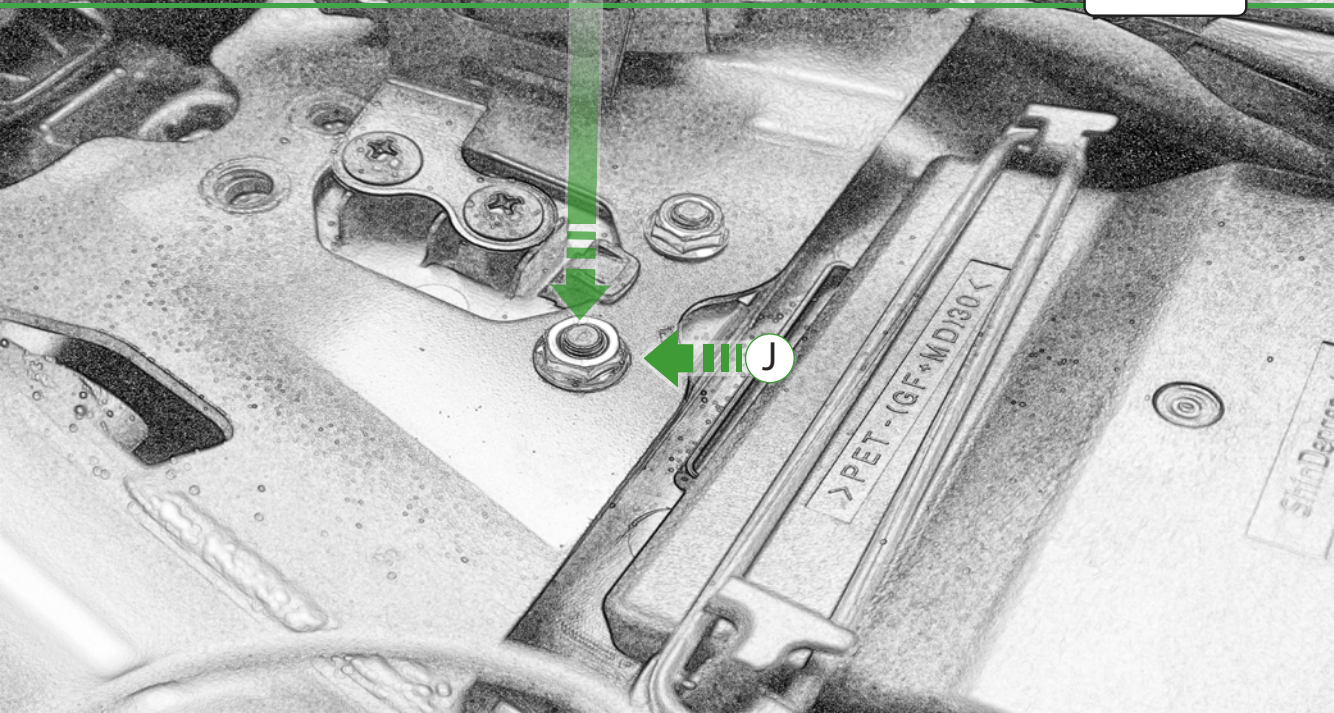


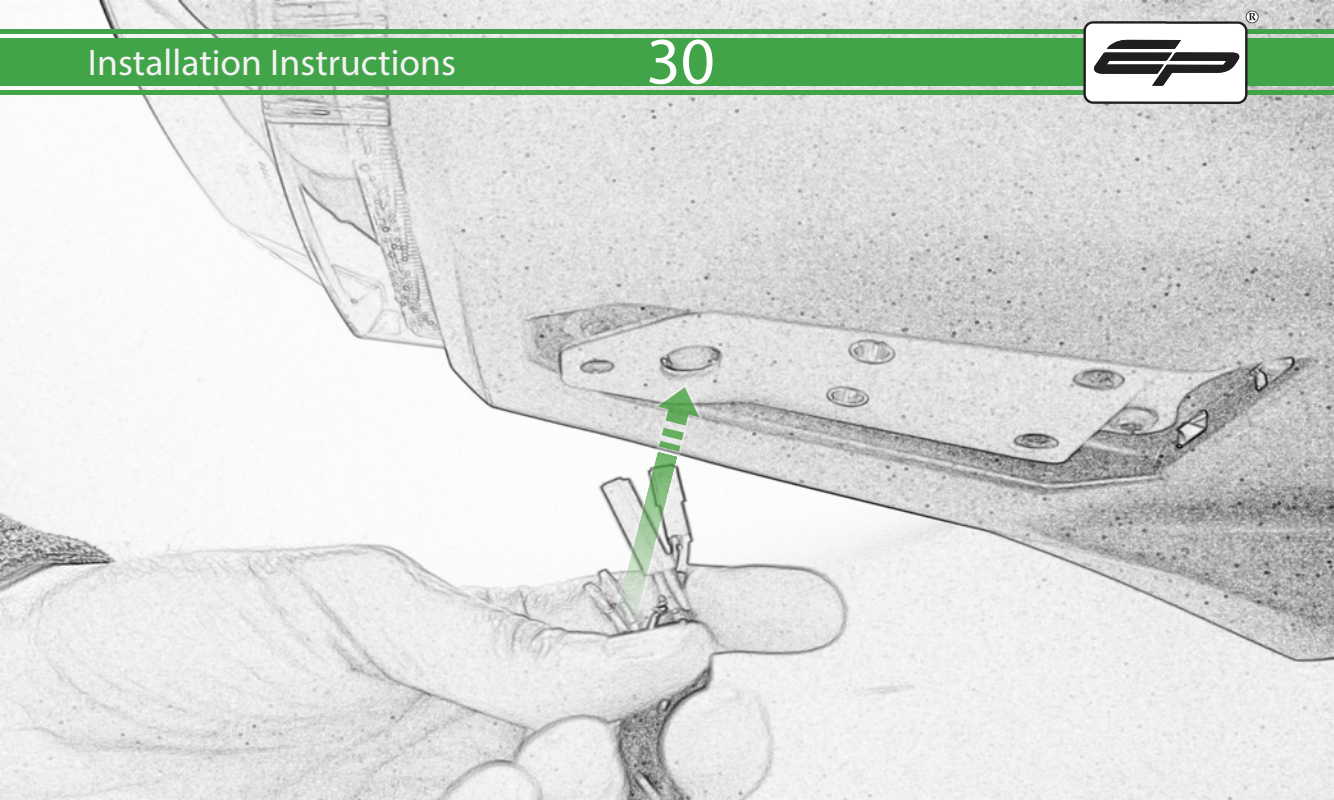




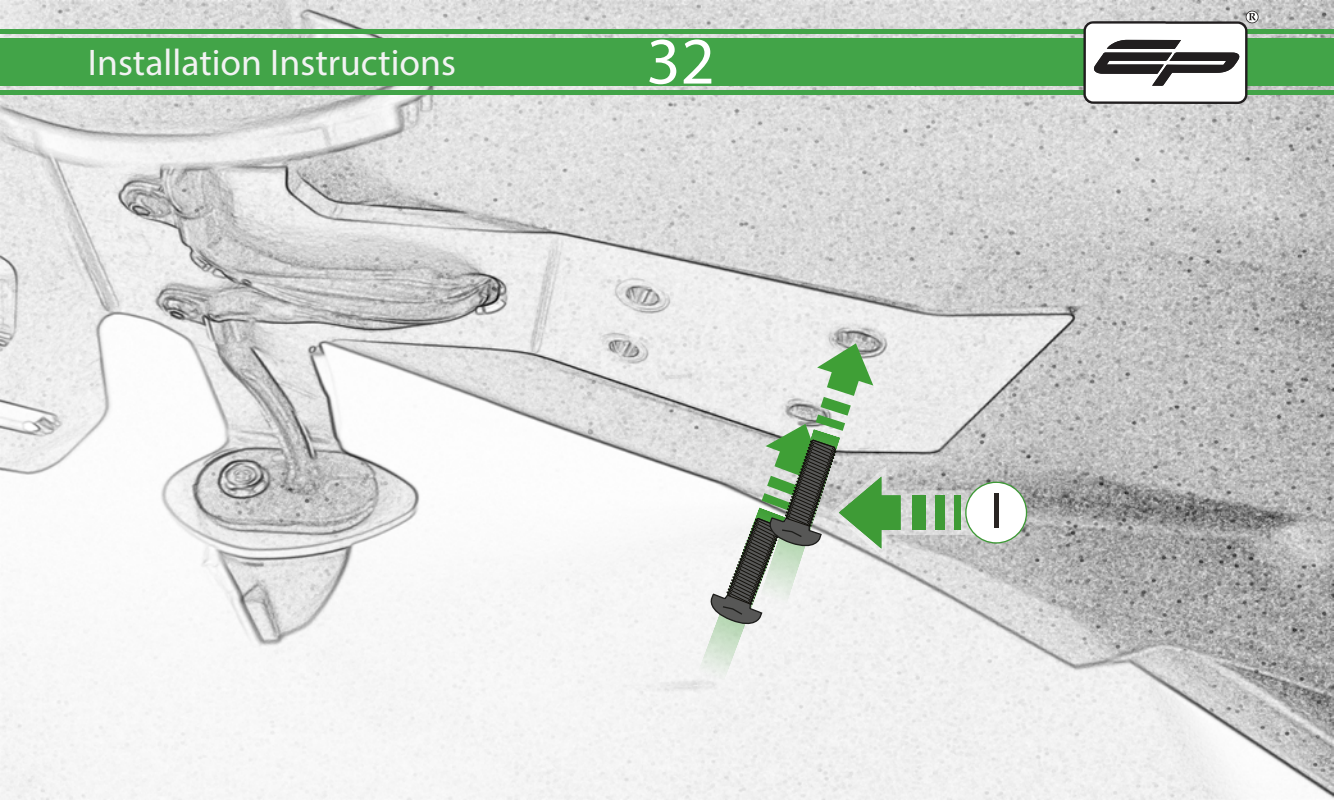


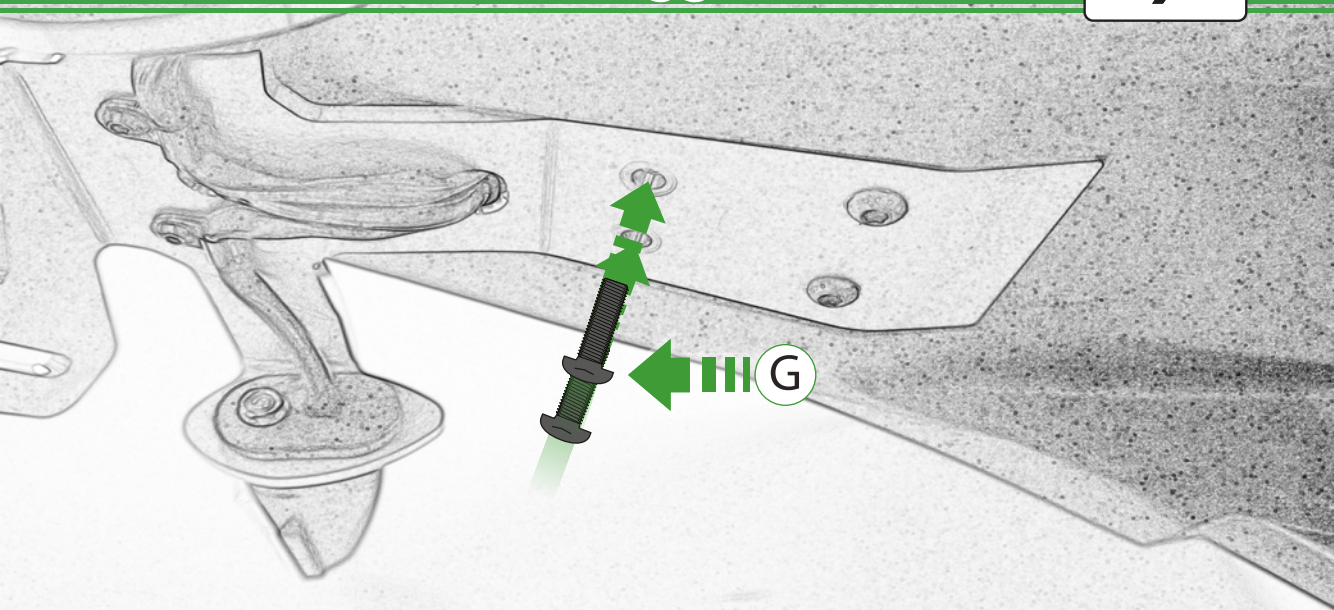


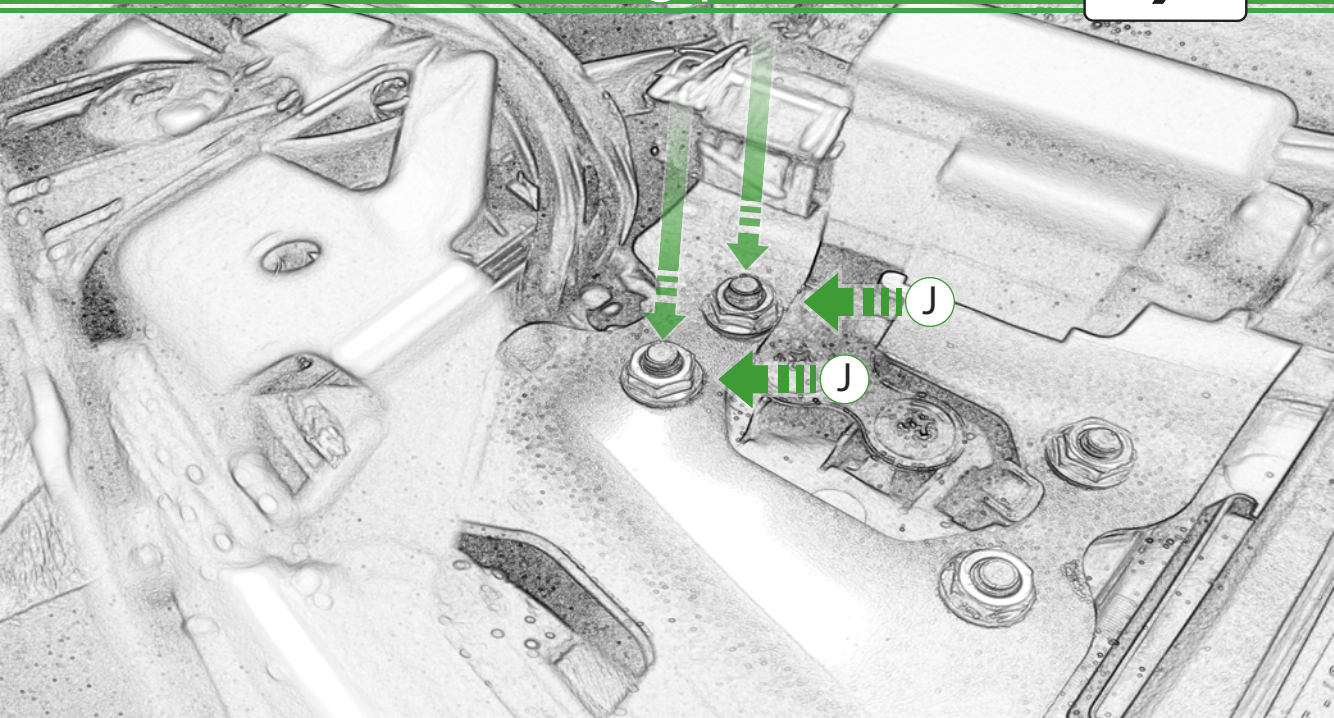



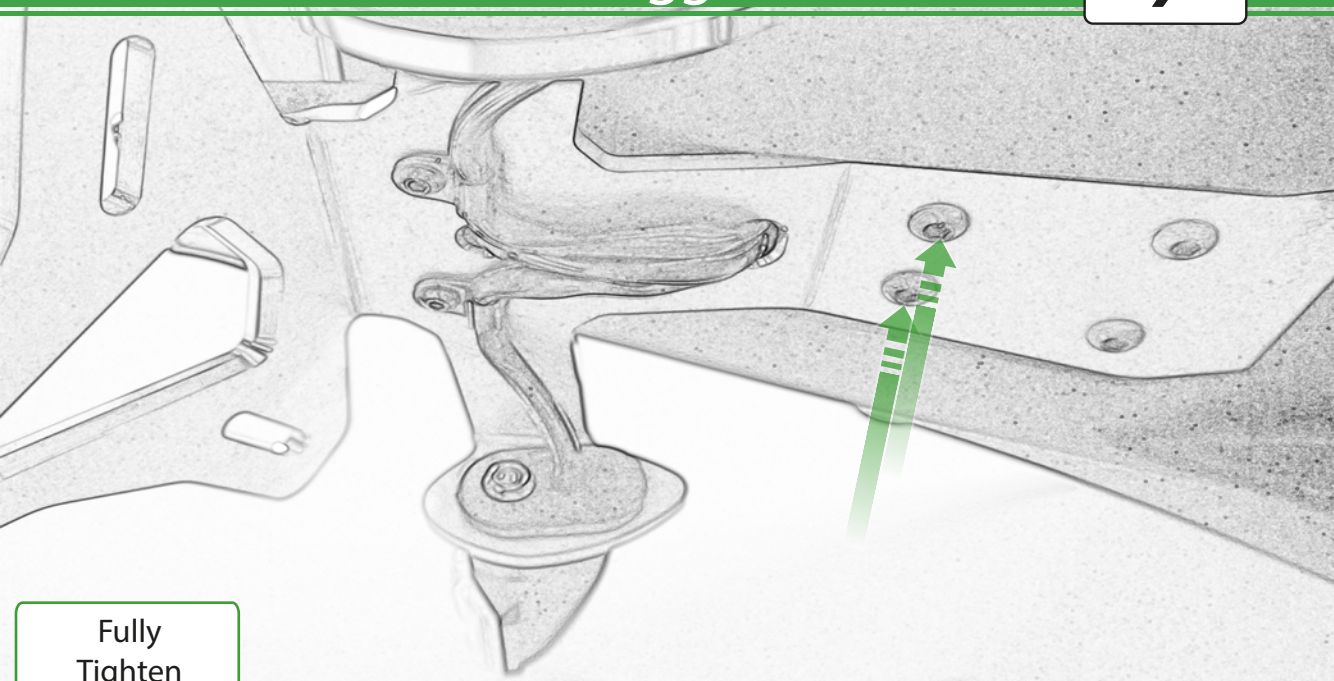


Fully
Tighten

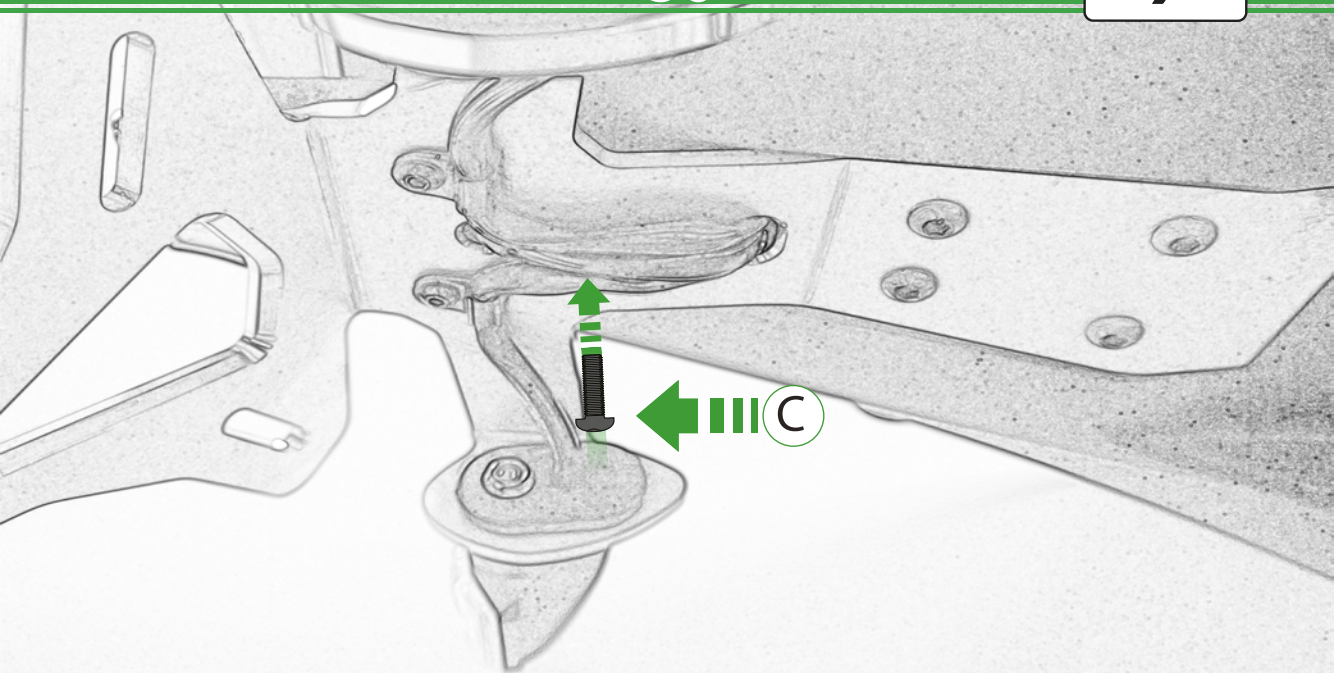



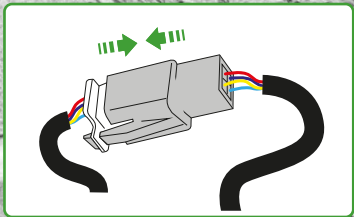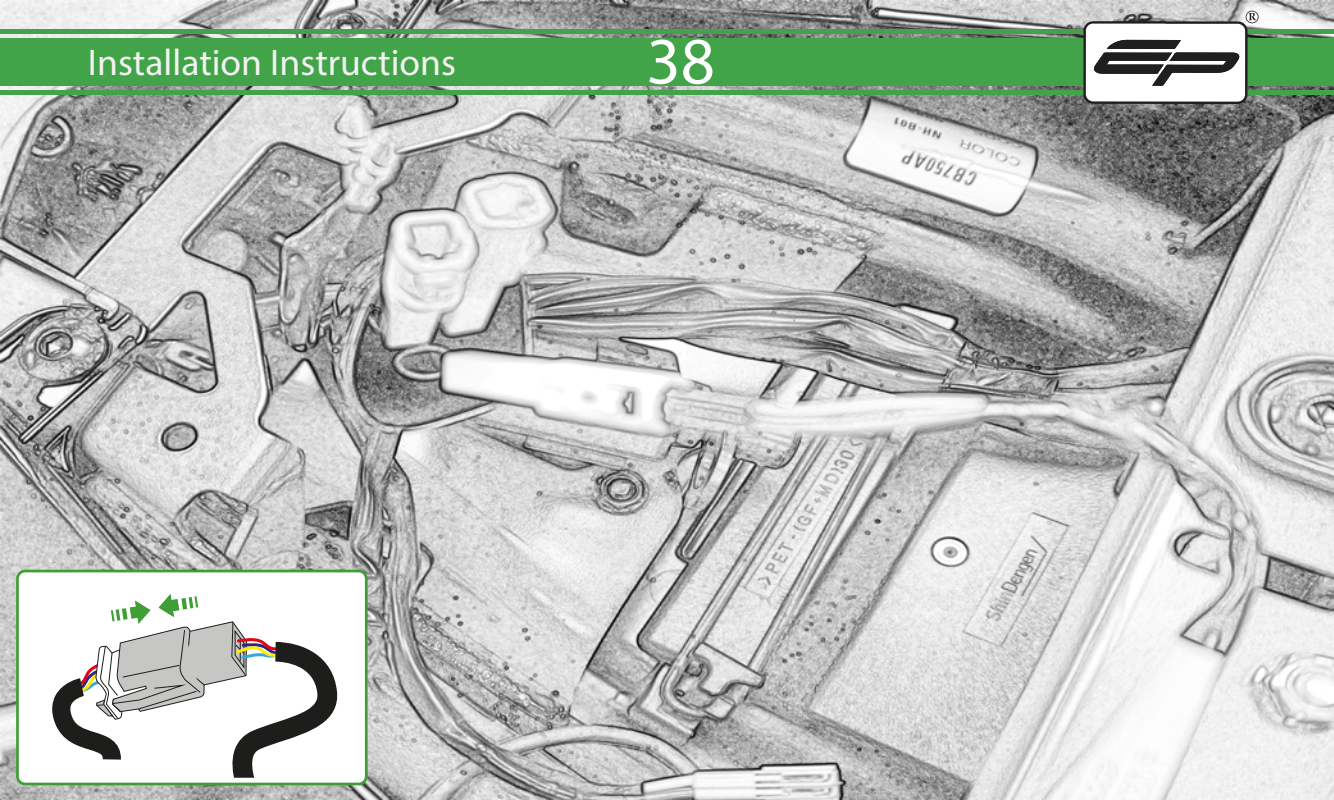

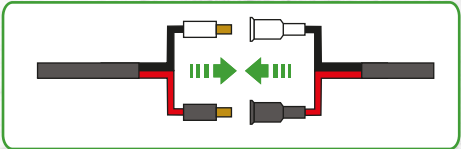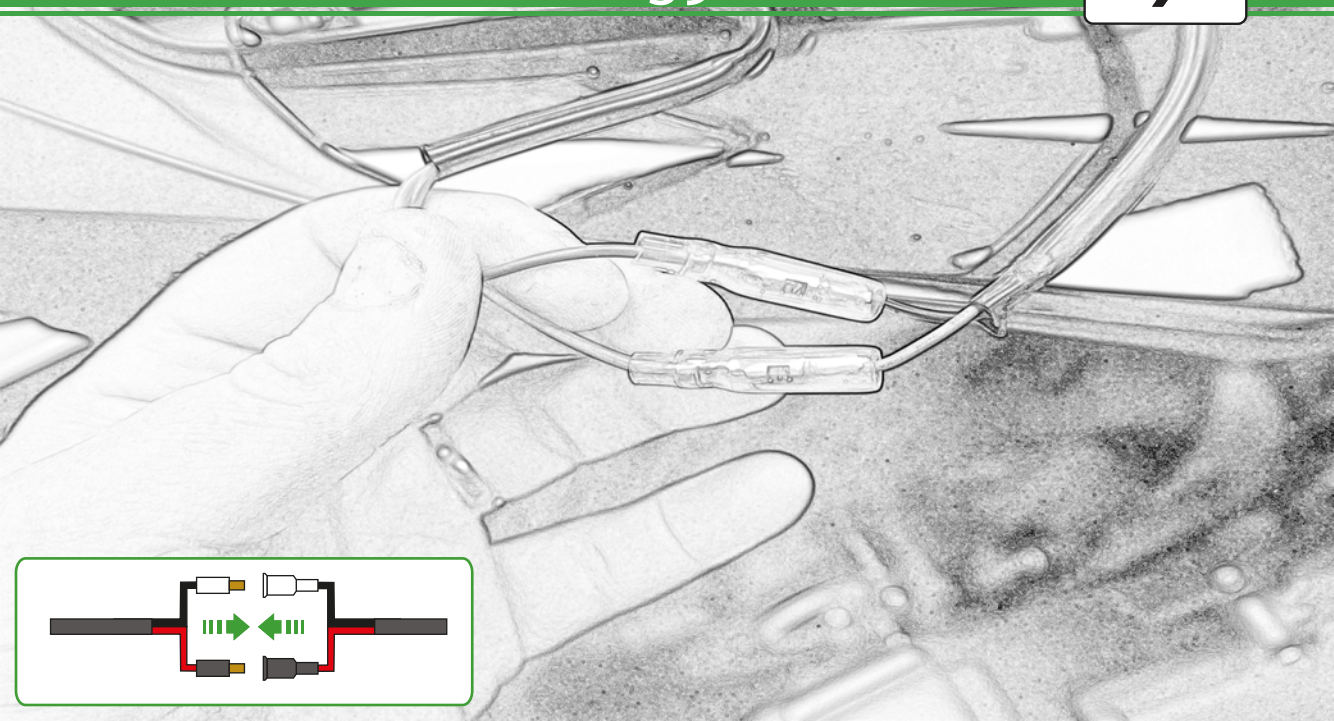





 **ESSENTIAL CHECKS** 

After installation of your tail tidy ensure that the licence plate does not contact the rear tyre when suspension is fully compressed.

Ensure all electrics including indicators, tail light, brake light and licence plate light lights are working correctly before riding the motorcycle.

It is recommended that periodic inspections are made to ensure that all fixings are fully tightend.

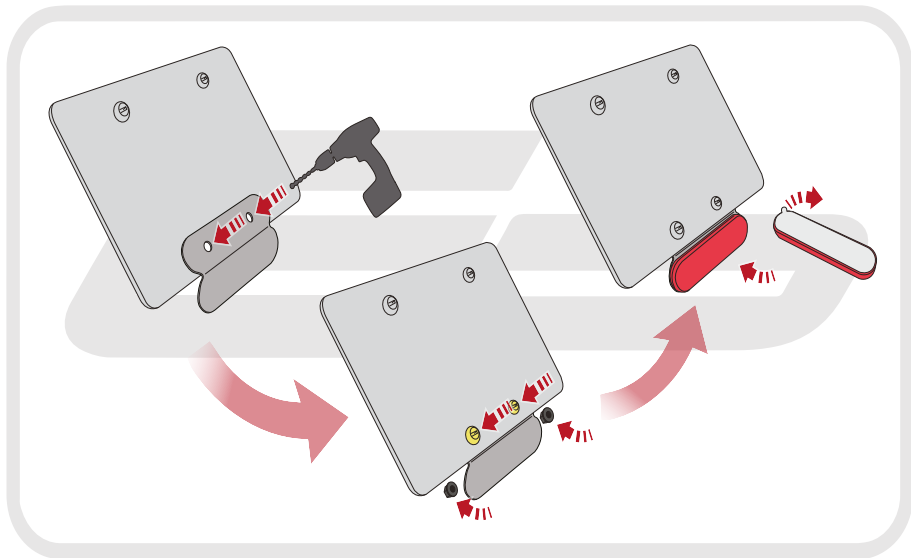

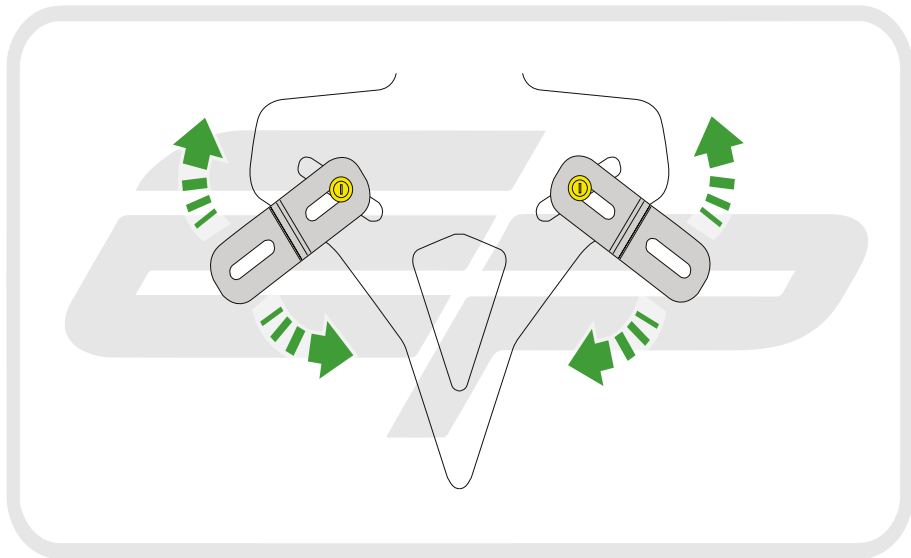



EVOTECH[®]
P E R F O R M A N C E

www.evotech-performance.com